

Broadband Connectivity System II

Copper :: Part Number 117389-4

User Manual



Applies to: :: 010-3232-0001 :: 010-3224-0001 :: 010-3201-0407 :: 010-3201-0401 :: 010-3201-0410 :: 710-3201-0002
:: 710-3201-0005 :: 710-3201-1001-U :: 710-3201-1002-U :: 710-3201-2001-U :: 710-3201-2002-U
:: 010-0000-3201BCS :: 010-0000-1401BCS :: 010-0000-2401BCS :: 010-0000-1471BCS :: 010-0000-0471BCS

Broadband Connectivity System II

Copper :: Part Number 117389-4

Table of Contents

Chapter 1: Description	1
1.1 Overview	1
1.1.1 Capabilities.....	3
1.1.2 Features	3
1.2 DSX Chassis & Passive Card Modules	4
1.2.1 DSX-3 Rear Cross-Connect Chassis.....	4
1.2.2 Fully Loaded DSX-3 Chassis	9
1.2.3 DSX Passive Card Modules.....	10
1.3 DNI Chassis & Passive Card Modules	11
1.3.1 DNI Chassis (Telect Model 010-0000-1402BCS).....	11
1.3.2 Fully Loaded 19-in. DNI Chassis (Telect Model 010-3224-0402)	12
1.3.2.1 DNI-3 Card Module (Telect Model 010-3201-0402)	12
1.4 BSCII Active Card Modules	12
1.4.1 Repeater Card Modules.....	13
1.4.2 Vector Optical Transport Module (OTM) Card Modules.....	13
1.5 Power Distribution.....	14
1.6 Specifications.....	15
1.6.1 DSX Electrical1.6.2 Mechanical	15
1.6.3 Environmental	15
Chapter 2: Installation.....	16
2.1 Installation Considerations.....	16
2.1.1 Location and Space	16
2.1.2 Computer Floor Issues.....	17
2.1.3 Required Tools and Equipment.....	17
2.2 Inspection	17
2.3 Installation.....	17
Chapter 3: Electrical Operation.....	24
3.1 Power.....	24
3.1.1 Tracer Lamps (TL).....	25
3.1.2 Monitor Ports.....	25
3.2 DSX Cross-Connections.....	25
3.2.1 Backplane Cross-Connections.....	25
3.2.2 DSX Card Front Patch	27
3.3 Repeater Cards	27
3.3.1 Simplex Repeater Card.....	27
3.3.2 Duplex Repeater Card	29
3.4 DNI Operations	30
3.4.1 Basic Function: Digital Network Interconnection.....	30
3.4.2 Interconnect Network Elements Using DNI Cards	31
3.4.3 DNI Card Monitoring	31
3.4.4 DNI Patching.....	32
3.5 Skeleton Bay Options	33
Chapter 4: Service	35
4.1 Owner Maintenance.....	35

Broadband Connectivity System II

Copper :: Part Number 117389-4

4.2 Troubleshooting Cross-Connected Signals	35
4.3 Replacing the Tracer Lamp LED.....	35
4.4 Service.....	35
4.4.1 In-Warranty Service	35
4.4.2 Out-Of-Warranty Service.....	36
4.5 Repacking For Shipment	36

Broadband Connectivity System II

Copper :: Part Number 117389-4

List of Figures

Figure 1 - 23-inch, 32-circuit BCSII With 6-Port DSX Card Modules.....	1
Figure 2 - DSX Modules	2
Figure 3 - Other Modules.....	2
Figure 4 - 23-inch DSX Chassis (Telect Model 010-0000-3201BCS).....	5
Figure 5 - 23-inch DSX Chassis - Rear View Showing BNC Connectors.....	5
Figure 6 - 19-inch DSX Chassis (Telect Model 010-0000-2401BCS).....	6
Figure 7 - 19-inch DSX Chassis - Rear View Showing BNC Connectors.....	6
Figure 8 - 23-inch Chassis with 24 Card Module Slots.....	7
Figure 9 - 23-inch Chassis with 24 Card Module Slots	8
Figure 10 - 10-Module, 23-inch Horizontal Chassis	8
Figure 11 - 8-Module, 19-inch Horizontal Chassis (Telect Model 010-0000-0471BCS)	9
Figure 12 - 8-Module, 19-inch Horizontal Chassis	9
Figure 13 - DSX Cross-Connect Modules (Mini-Weco Front Jacks)	10
Figure 14 - 23-inch DNI-3 Chassis (Telect Model 010-0000-1402BCS).....	11
Figure 15 - 23-inch DNI-3 Chassis - Rear View Showing BNC Connectors.....	11
Figure 16 - DNI-3 Card Module	12
Figure 17 - Simplex Repeater (710-3201-0002).....	13
Figure 18 - Vector OTM with SC Connectors	14
Figure 19 - Dual-Feed 25A GMT Power Distribution Panel With Fuse Alarms.....	14
Figure 20 - Rack	16
Figure 21 - Mounting Chassis to Rack.....	18
Figure 22 - Installing a Module	19
Figure 23 - Grounding the Chassis.....	20
Figure 24 - BNC Insertion Tool	20
Figure 25 - Connections	21
Figure 26 - Rear Cross-Connect Cables with Tracer Wire	22
Figure 27 - Power from Distribution Panel to Front Tracer Lamp	24
Figure 28 - Tracer Lamp Operation	25
Figure 29 - Schematic Drawing of Cross-Connection.....	26
Figure 30 - Rear Cross-Connect Cables with Tracer Wire	26
Figure 31 - Temporary Front Cross-Connect Using Patch Cables & DSX Cards	27
Figure 32 - Simplex Repeater.....	27
Figure 33 - Repeater Application Using Two Simplex Repeaters	28
Figure 34 - Simplified Schematic of a Simplex Repeater Application	28
Figure 35 - Duplex Repeater	29
Figure 36 - Repeater Application Using Two Simplex Repeaters	29
Figure 37 - Simplified Schematic of a Duplex Repeater Application.....	30
Figure 38 - DNI	30
Figure 39 - Network Elements	31
Figure 40 - DNI Card Monitoring.....	31
Figure 41 - Patching Between DNI Card Modules.....	32
Figure 42 - Reference Schematic for DNI-3 Card Module (Model 010-3201-0402)	33

Broadband Connectivity System II

Copper :: Part Number 117389-4

Chapter 1: Description

1.1 Overview

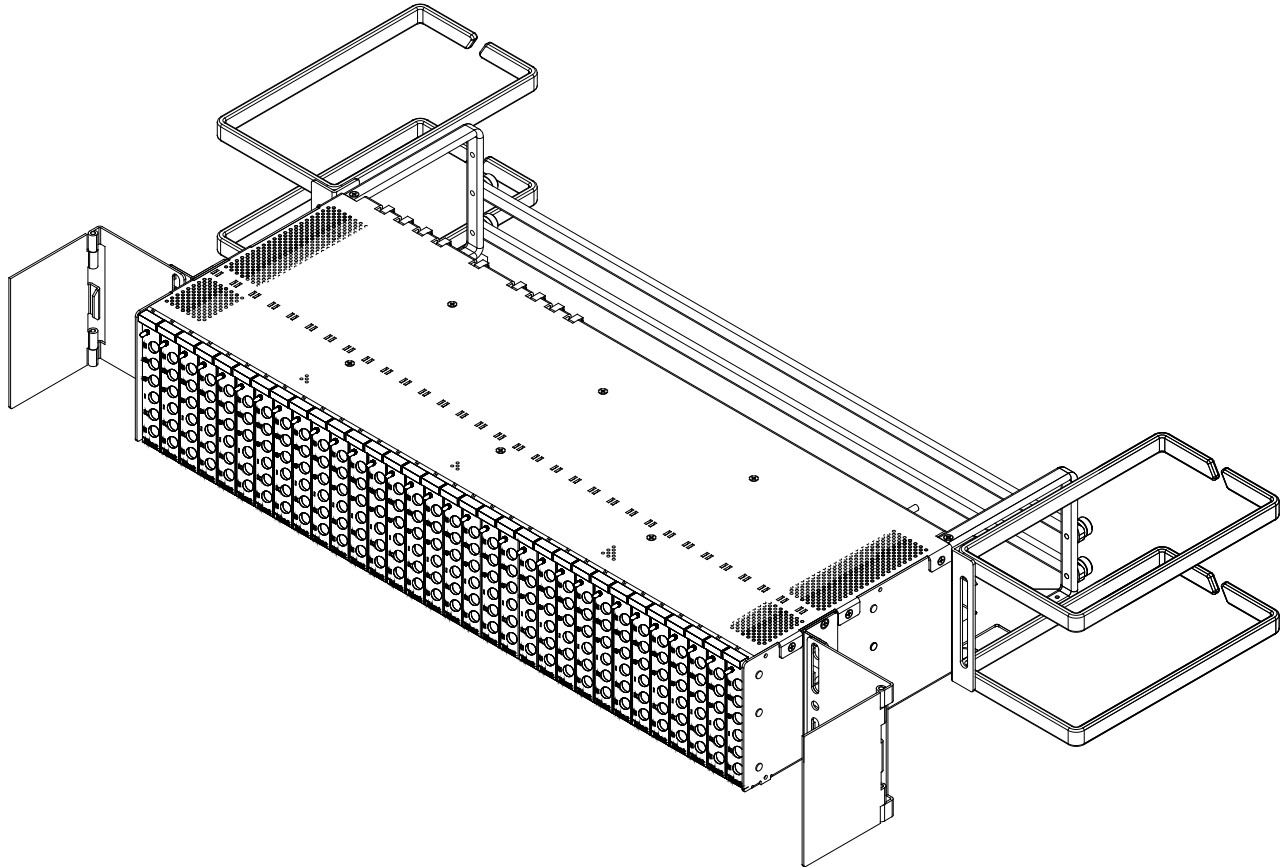


Figure 1 - 23-inch, 32-circuit BCSII With 6-Port DSX Card Modules

The Telect Broadband Connectivity System II (BCSII) is a family of related products providing a high-density environment for cross-connecting and interconnecting DS3, STS-1, E-3, STM-1, and STS-3 signals from broadband equipment such as digital radio, multiplexers and 3:3 or 3:1 DCS. Available components include several 19-in and 23-in chassis with integrated backplanes.

The chassis accommodate three, four, or six-port DSX and six-port DNI card modules with frontpanel patching. Other Telect card modules (simplex and duplex repeaters and optical/electrical

Broadband Connectivity System II

Copper :: Part Number 117389-4

[optical transport module] converters) can be inserted into the chassis and used along with DSX and DNI card modules for added flexibility and adaptability.

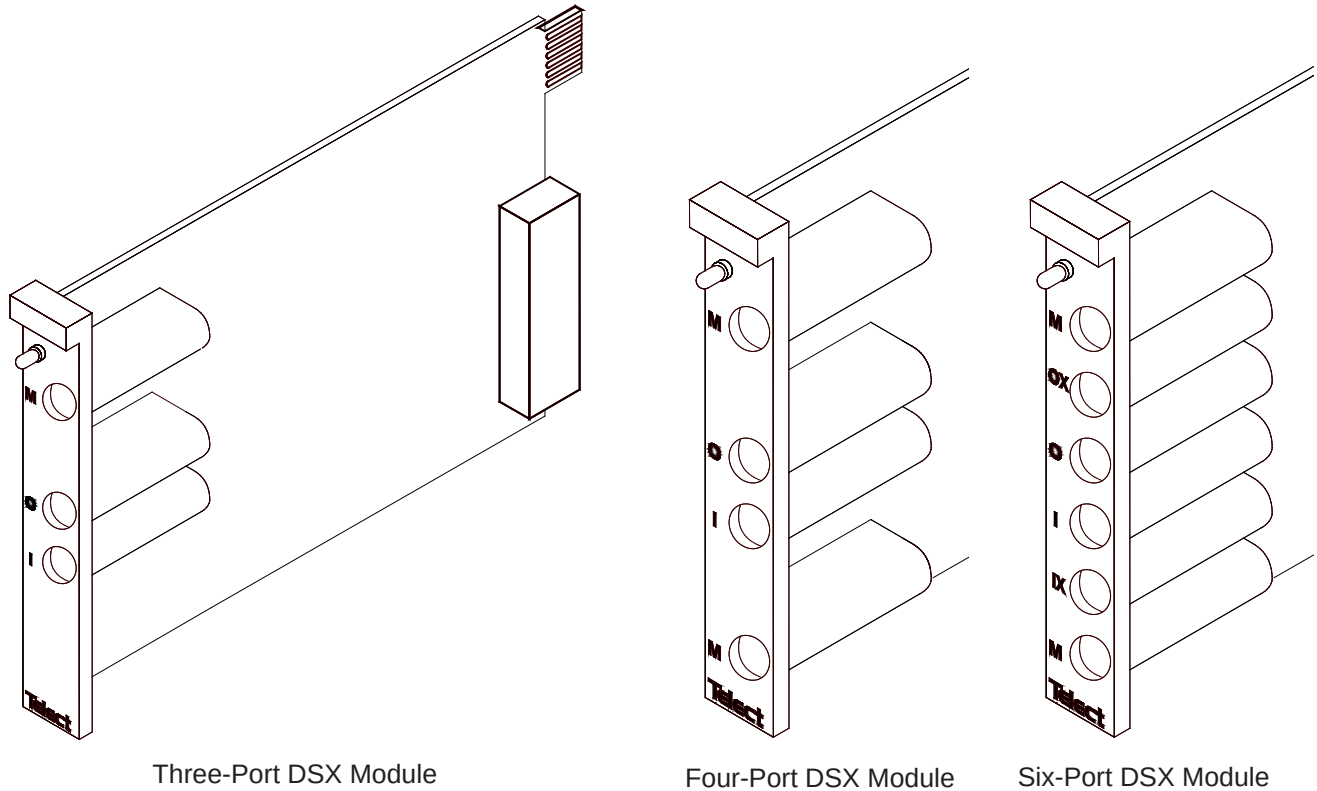


Figure 2 - DSX Modules

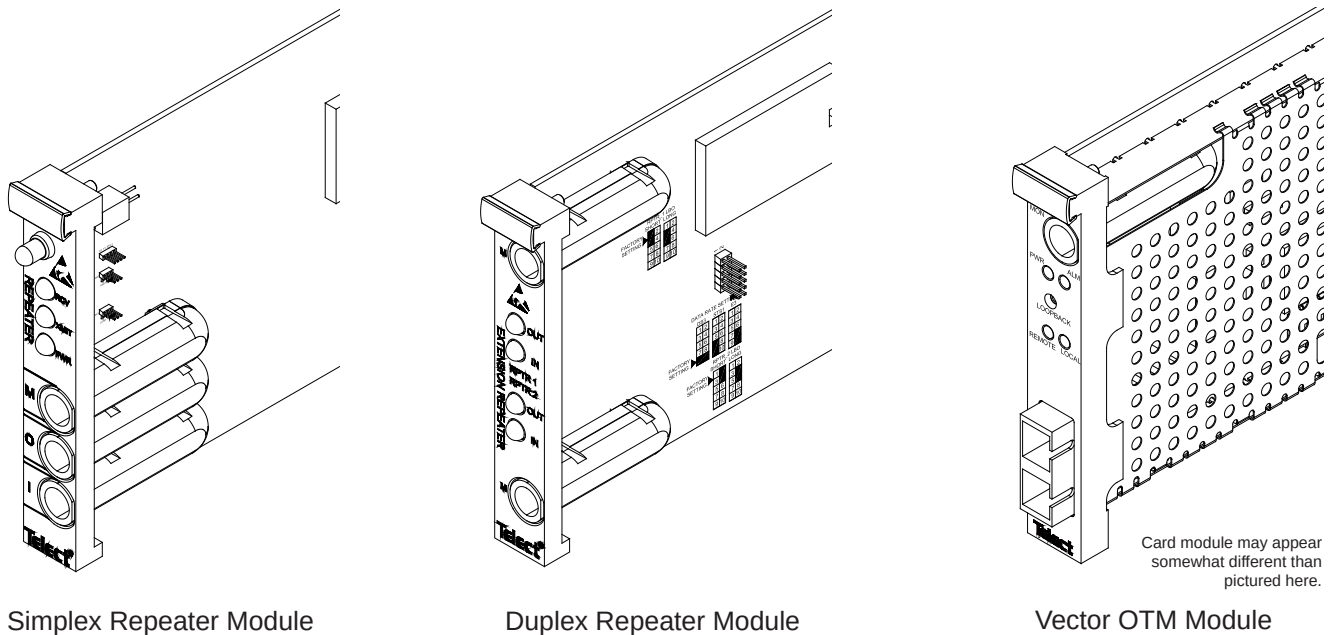


Figure 3 - Other Modules

Broadband Connectivity System II

Copper :: Part Number 117389-4

1.1.1 Capabilities

The Telect DSX-3 system enables patching, cross-connecting, interconnecting, test and monitor functions for digital signals in 75 ohm systems for the following bit rates:

E3	34.368 Mbps
DS3	44.736 Mbps
STS-1	51.84 Mbps
STS-3	155.52 Mbps
STM-1	155.52 Mbps

The maximum number of cross-connect cards in a 7 ft x 23 in. x 12 in. equipment bay with 14 chassis is 448 cards.

1.1.2 Features

The BCS II has the following features:

- There are 32-active or mixed circuits per chassis; **48** per passive 8 x 23 in. chassis.
- Customers can pre-terminate network elements and pre-wire cross-connect assignments on-site.
- Front and rear tracer lamps display circuit cross-connects.
- Bidirectional monitoring is available.
- Card modules use Mini-WECO jacks and BNC or 1.6/5.6 connectors.
- The BCS II provides flexible cable management options.
- DNI cards and DNI-only chassis are available. (Note that the DNI card modules do not require power.)
- DNI cards fit DSX chassis.
- The BCS II provides 19 in. or 23 in. chassis.
- The BCS II is available for WECO, EIA, ETSI racks.
- Modules can be mixed in the same chassis.
- Alarm outputs are available on the DSX chassis for those active card modules capable of generating critical, major, and/or minor alarms

Broadband Connectivity System II

Copper :: Part Number 117389-4

1.2 DSX Chassis & Passive Card Modules

1.2.1 DSX-3 Rear Cross-Connect Chassis

Typical DSX-3 rear cross-connect chassis are shown in the illustrations on the following pages:

- 23-in., 32-Circuit DSX Chassis, page 5
- 19-in., 24 -Circuit DSX Chassis, page 6
- 23-in., 24-Circuit DSX Chassis, page 7
- 23- & 19-in. Horizontal Chassis (10 & 8 Circuits, respectively), page 8 & 9

All DSX chassis have integrated backplanes with tracer lamps. Vertical DSX chassis can accommodate any active or passive BCSII card module.

Rear plates with BNC connections are alternately finished black, white, black, white, etc.

The following table lists all empty 19-in. and 23-in DSX-3 chassis models. Fully pre-loaded chassis containing DSX modules are listed in the following subsection.

HxDxW Dimensions (in/cm)	Number of card slots	Telect Part Number
3.95/10.03 x 11.81/29.98 x 23.01/58.43	32	010-0000-3201BCS
3.95/10.03 x 11.82/30.01 x 23.00/58.43	24	010-0000-1401BCS
3.95/10.03 x 11.87/30.14 x 19.00/48.26	24	010-0000-2401BCS
1.72/4.37 x 7.59/19.38 x 23.00/58.43	10, horizontal	010-0000-1471BCS
1.72/4.37 x 7.59/19.38 x 19.00/48.26	8, horizontal	010-0000-0471BCS

Broadband Connectivity System II

Copper :: Part Number 117389-4

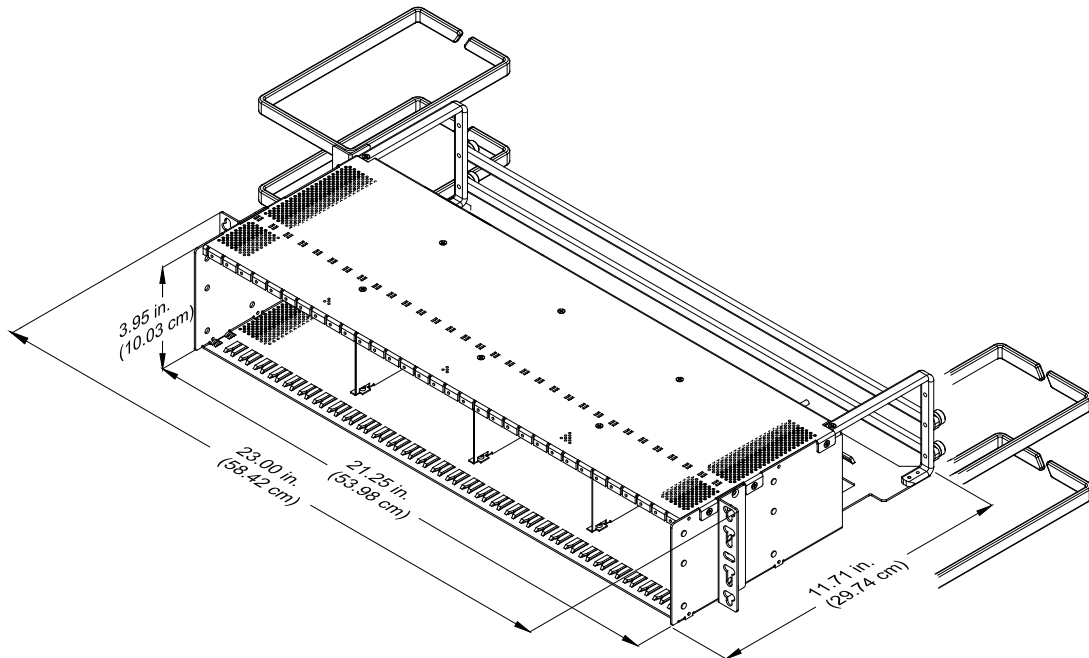


Figure 4 - 23-inch DSX Chassis (Telect Model 010-0000-3201BCS)

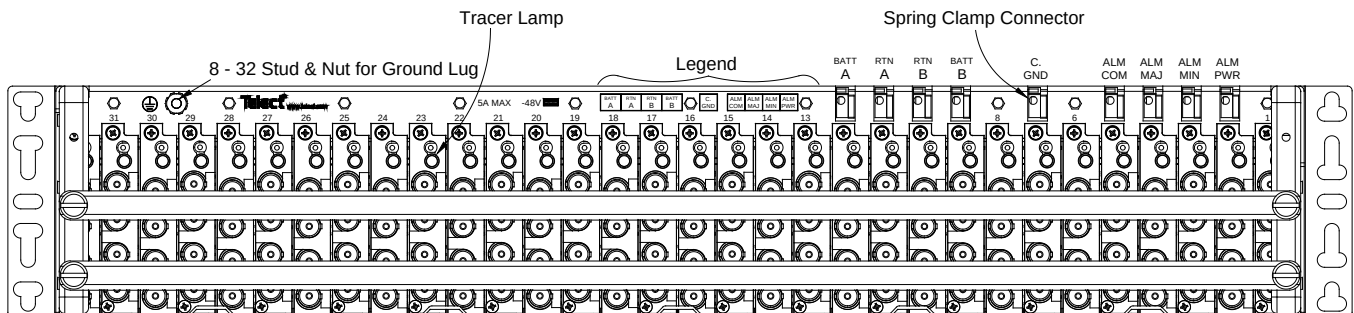


Figure 5 - 23-inch DSX Chassis - Rear View Showing BNC Connectors

Broadband Connectivity System II

Copper :: Part Number 117389-4

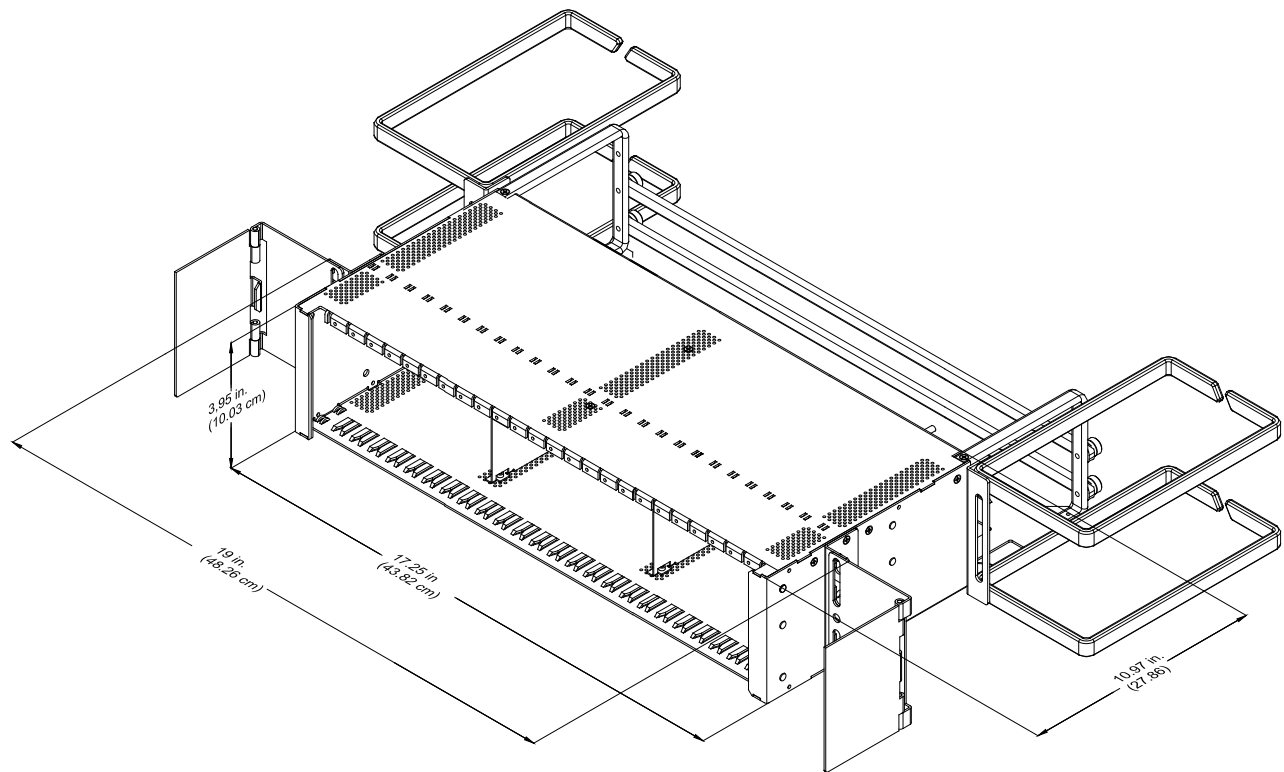


Figure 6 - 19-inch DSX Chassis (Telect Model 010-0000-2401BCS)

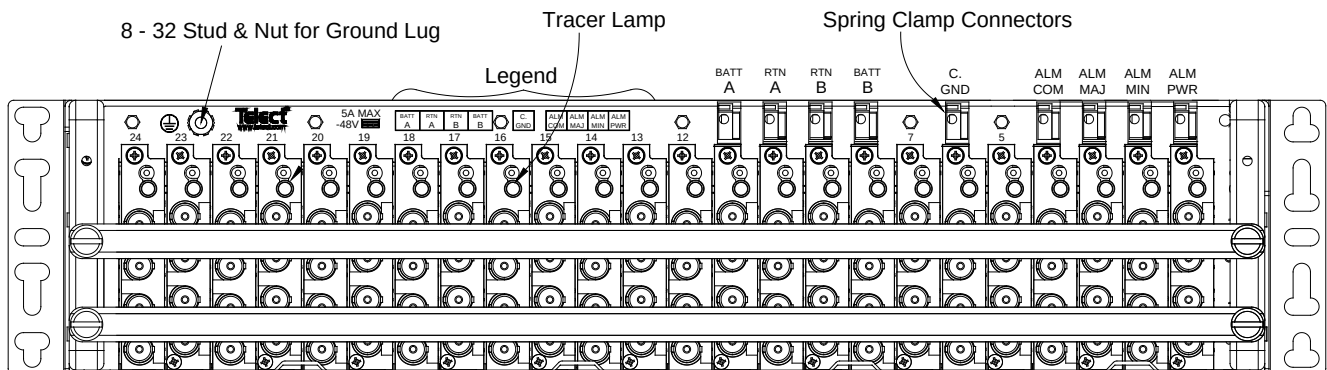


Figure 7 - 19-inch DSX Chassis - Rear View Showing BNC Connectors

Broadband Connectivity System II

Copper :: Part Number 117389-4

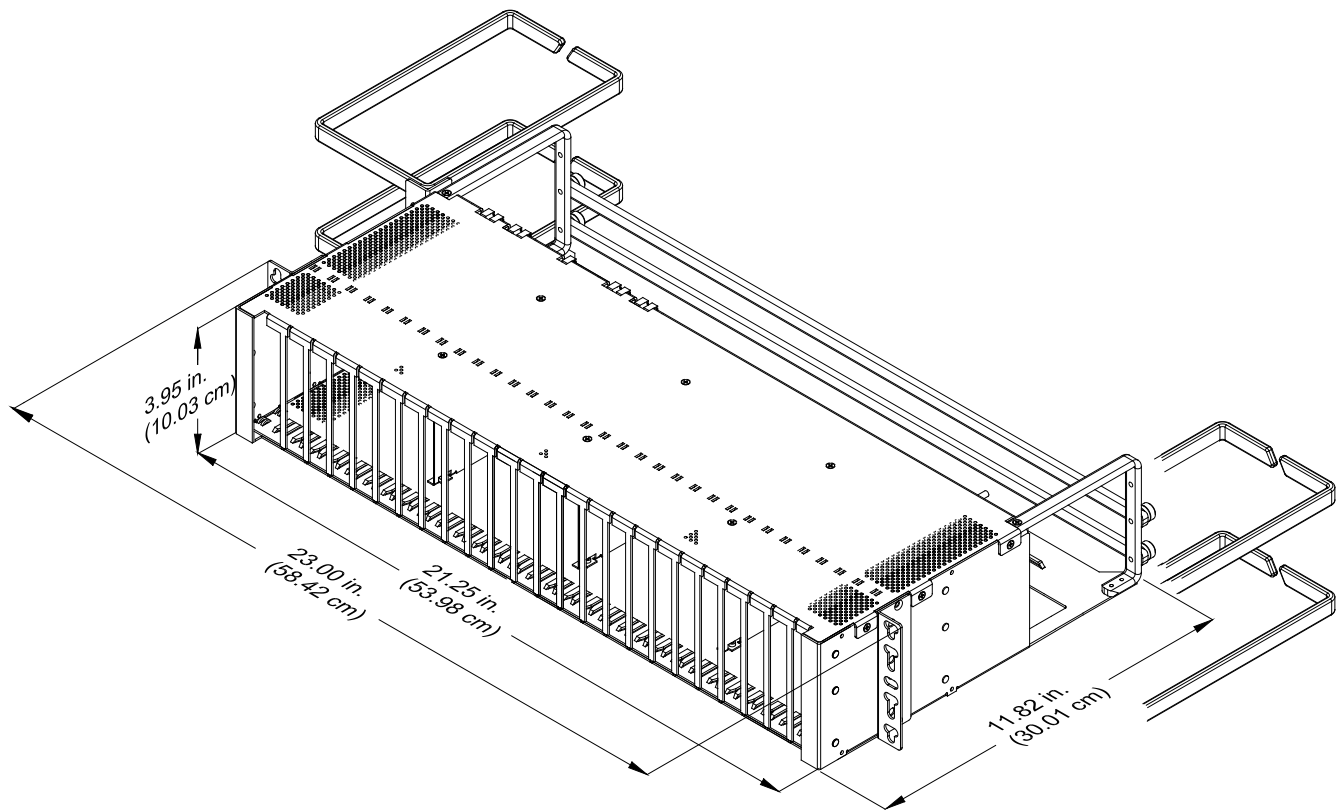


Figure 8 - 23-inch Chassis with 24 Card Module Slots
(Telect Model 010-0000-1401BCS)

Broadband Connectivity System II

Copper :: Part Number 117389-4

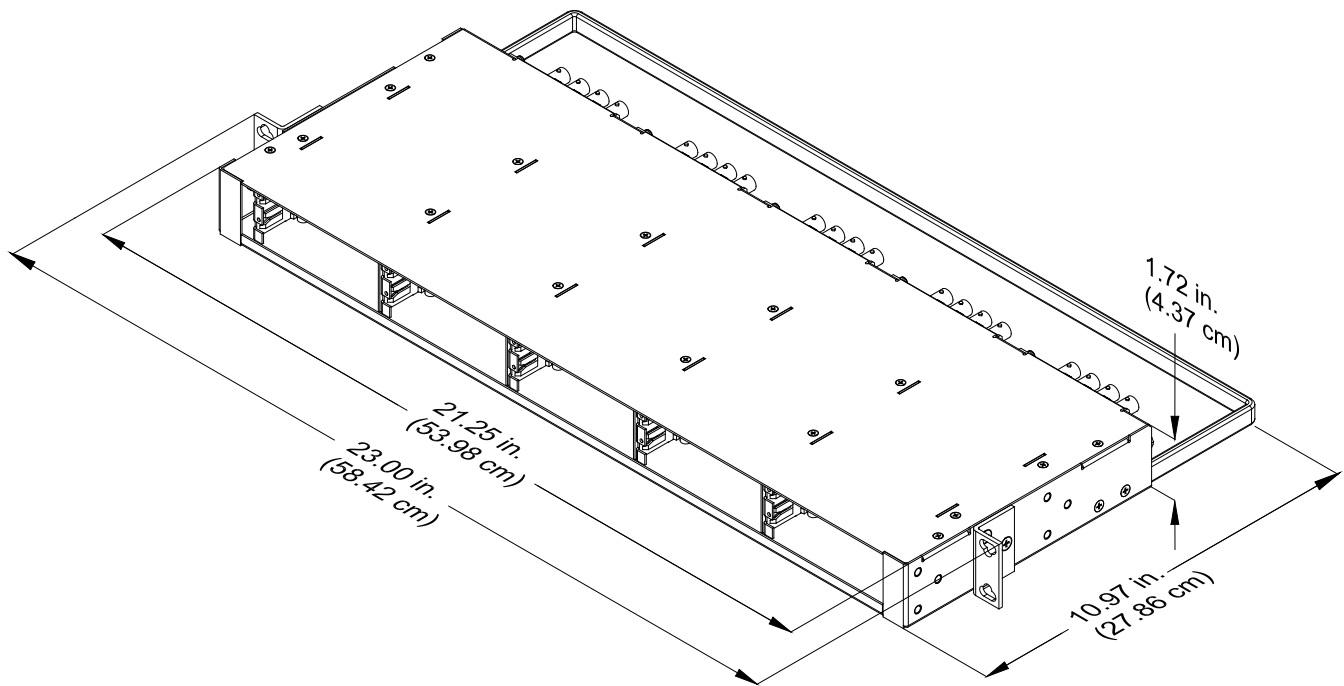


Figure 9 - 23-inch Chassis with 24 Card Module Slots (Telect Model 010-0000-1401BCS)

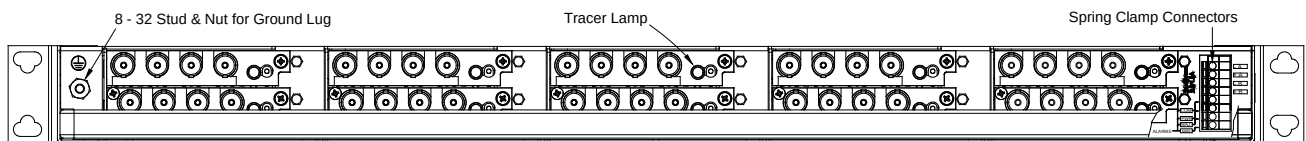


Figure 10 - 10-Module, 23-inch Horizontal Chassis — Rear View Showing BNC Connectors

Broadband Connectivity System II

Copper :: Part Number 117389-4

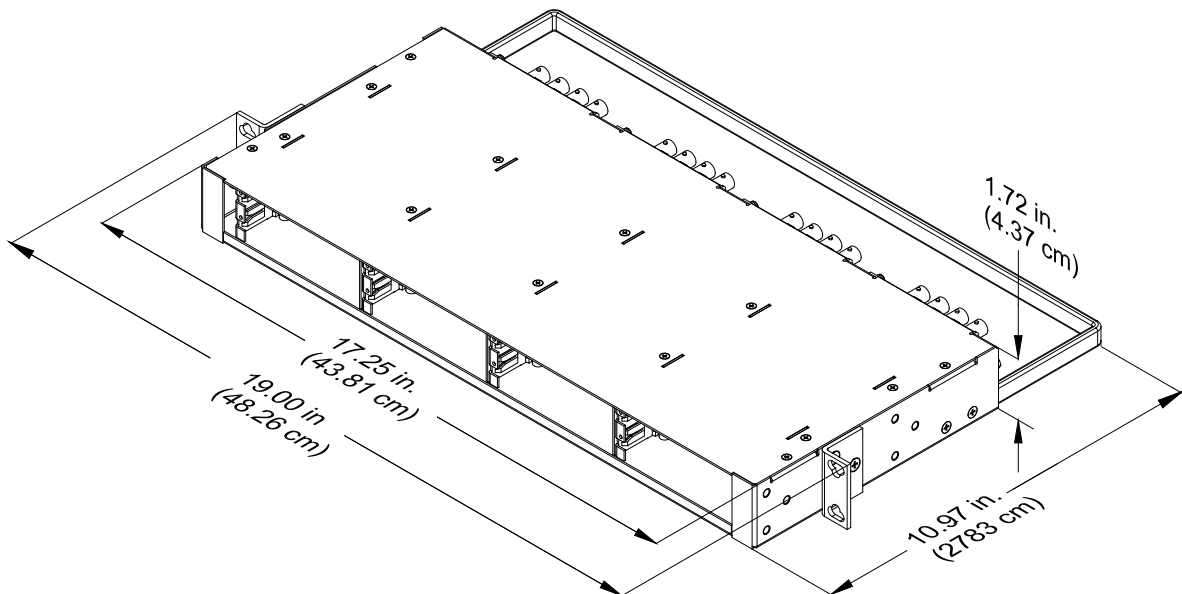


Figure 11 - 8-Module, 19-inch Horizontal Chassis (Telect Model 010-0000-0471BCS)

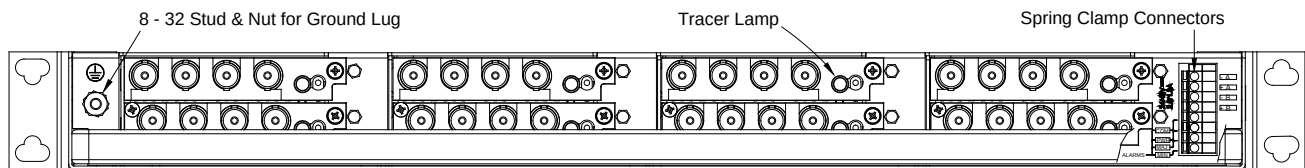


Figure 12 - 8-Module, 19-inch Horizontal Chassis — Rear View Showing BNC Connectors

1.2.2 Fully Loaded DSX-3 Chassis

The following table lists the fully loaded DSX-3 models.

Chassis Width (in/cm)	#cards	Telect Part Number
23/58.43	32	010-3232-0001
23/58.43	24	010-3224-0001

Fully loaded chassis include the following:

- BNC Rear I/O and XI/XO connectors
- 6-Port Mini-Weco front jacks
- Front and Rear Tracer Lamps

Chassis are shipped with all cards installed.

Broadband Connectivity System II

Copper :: Part Number 117389-4

1.2.3 DSX Passive Card Modules

DSX card modules have Mini-Weco jacks at the front of the module for passive monitoring and/or cross-connection. Rear connectors on card modules, shown in the following illustration, snap into connectors on a 23-in. or 19-in. DSX-3 chassis backplane. All card modules have white faceplates.

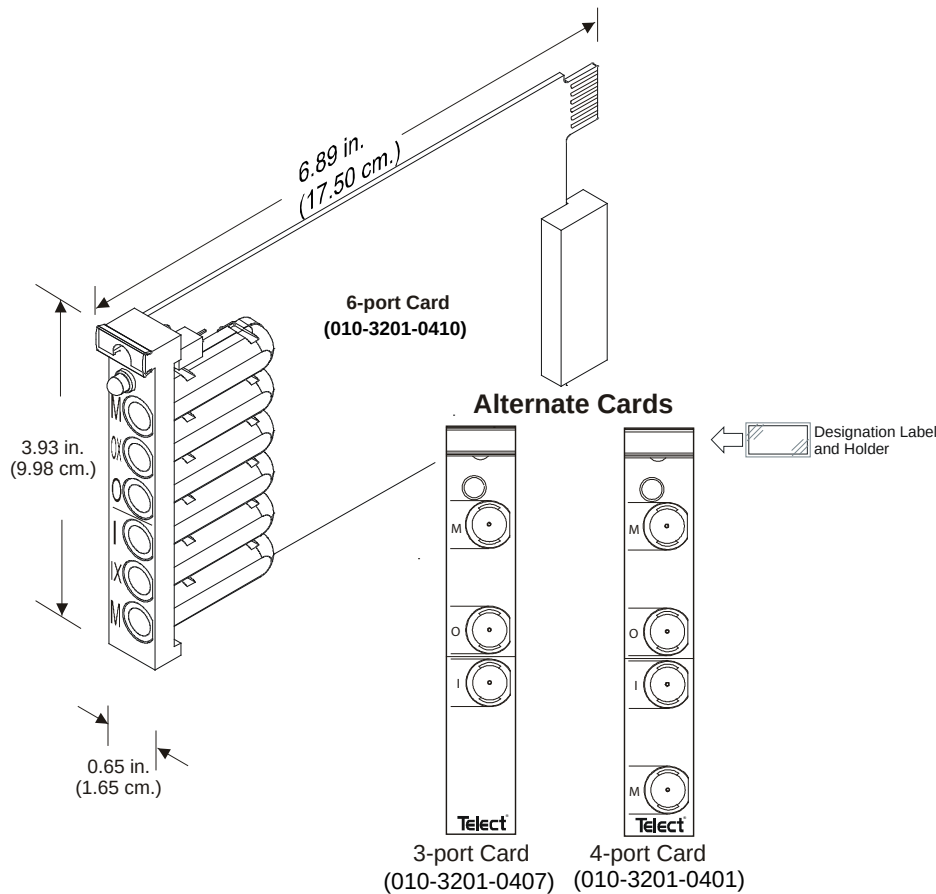


Figure 13 - DSX Cross-Connect Modules (Mini-Weco Front Jacks)

Number of Ports	Telect Part Number
3	010-3201-0407
4	010-3201-0401
6	010-3201-0410

Broadband Connectivity System II

Copper :: Part Number 117389-4

1.3 DNI Chassis & Passive Card Modules

1.3.1 DNI Chassis (Telect Model 010-0000-1402BCS)

The following illustration shows Telect's 23-in. DNI chassis.

Telect's DNI-3 chassis does not have a power backplane. The chassis has rear external BNC I/O connectors for use with DNI card modules. Although only passive DNI card modules are used in DNI chassis, the DNI card modules can also be used in the DSX chassis.

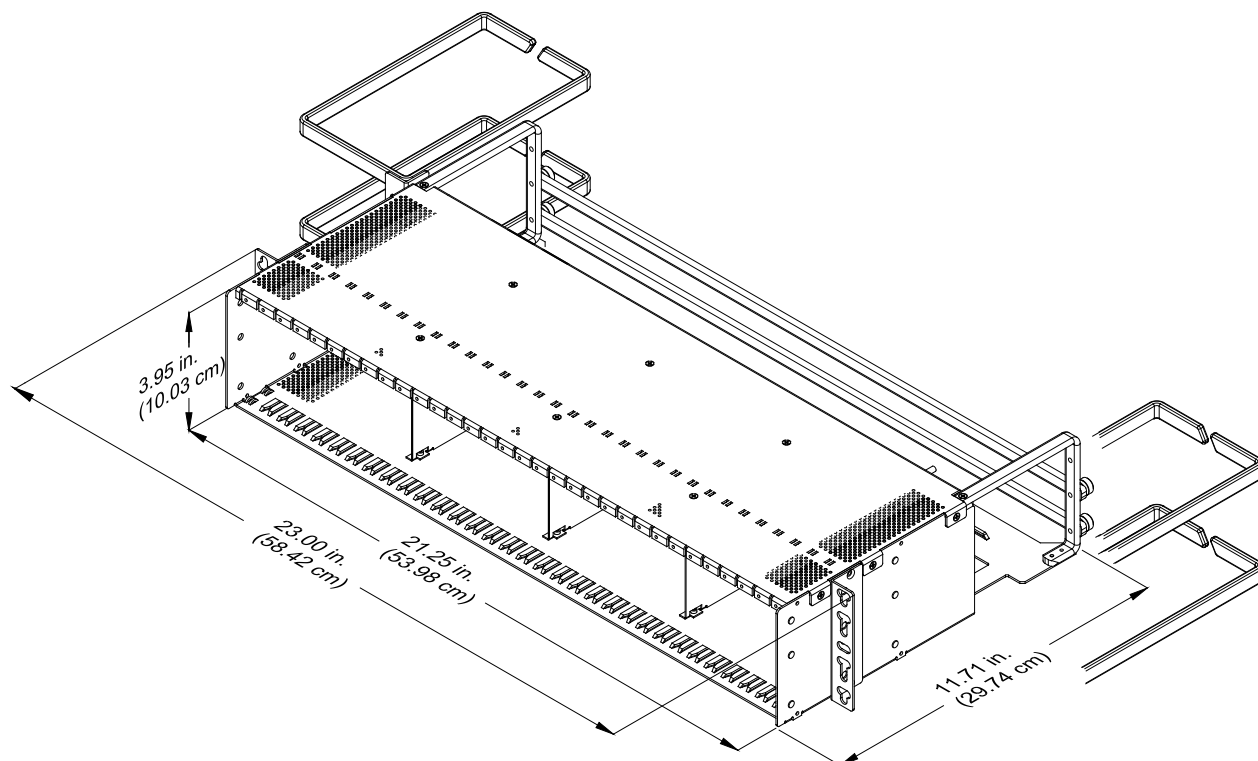


Figure 14 - 23-inch DNI-3 Chassis (Telect Model 010-0000-1402BCS)

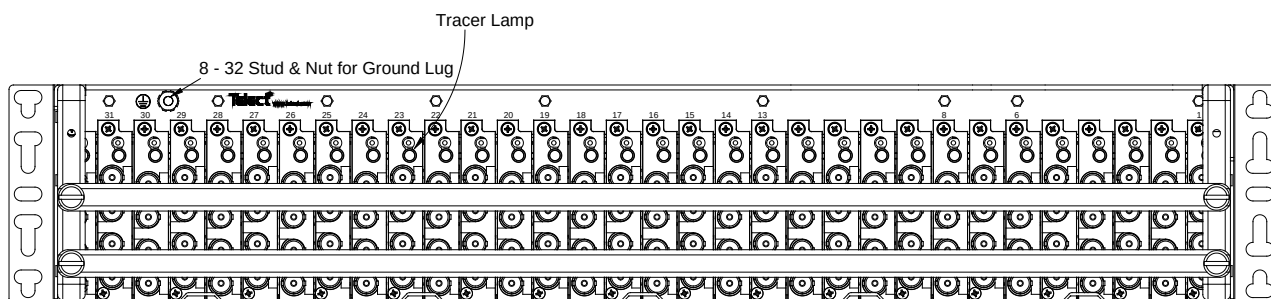


Figure 15 - 23-inch DNI-3 Chassis - Rear View Showing BNC Connectors

Broadband Connectivity System II

Copper :: Part Number 117389-4

1.3.2 Fully Loaded 19-in. DNI Chassis (Telect Model 010-3224-0402)

The fully loaded 19-in. DNI chassis includes the following:

- DNI rear labeling (NE-1 I/O, NE-2 I/O)
- 24 DNI cards installed in a 19-in. Telect DNI-3 chassis
- BNC Rear I/O connectors
- Mini-Weco front jacks

1.3.2.1 DNI-3 Card Module (Telect Model 010-3201-0402)

DNI-3 card modules, shown in the illustration on the right, have six Mini-Weco jacks at the front of the module for passive monitoring and patching. Rear card connectors snap into connectors on 23-in. or 19-in. DNI or DSX chassis.

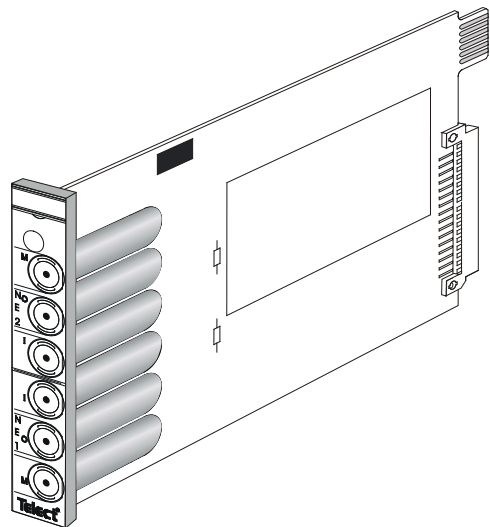


Figure 16 - DNI-3 Card Module

1.4 BSCII Active Card Modules

The following table gives pertinent information about the active card modules.

Active Module Description	# Cards per Chassis	Telect Part Number
Simplex Repeater Module	5	710-3201-0002
Duplex Repeater Module	5	710-3201-0005
Optical/Electrical Converter, Multimode, ST	5	710-3201-1001-U
Multimode, SC	5	710-3201-1002-U
Single mode, ST	5	710-3201-2001-U
Single mode, SC	5	710-3201-2002-U

Broadband Connectivity System II

Copper :: Part Number 117389-4

1.4.1 Repeater Card Modules

The repeater cards enable increased separation up to 900 feet (274 m) between crossconnected network elements, using ATT 734A cable. Repeater cards can be stationed at 900 feet intervals to allow unlimited signal repetitions.

The simplex repeater card (710-3201-0002) is always used in pairs. The duplex repeater card (710-3201-0005) contains two simplex repeaters with a common power supply. Consult the Simplex Repeater User Manual and the Duplex Repeater User Manual for operational details.


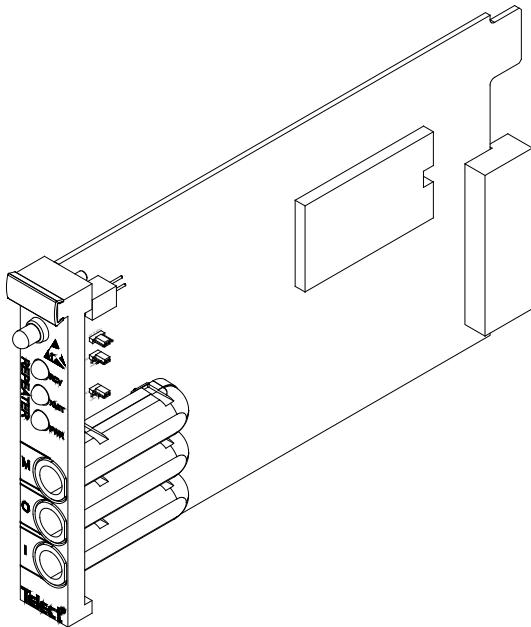


Figure 17 - Simplex Repeater (710-3201-0002)

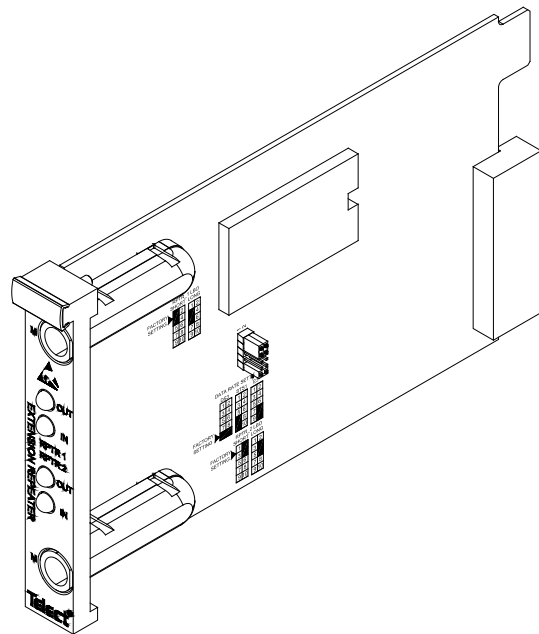

Duplex Repeater (710-3201-0005)

1.4.2 Vector Optical Transport Module (OTM) Card Modules

The Vector OTM (or optical/electrical converter) card modules convert single-mode or multimode fiber optic signals to electrical signals and vice versa. All fiber optic connectors are located at the front of the modules.

Telect manufactures both single-mode and multimode converters with either ST or SC connectors. A hardened version of the single mode optical/electrical converter with SC connectors is suitable for extended temperature operation.

Consult the Vector Optical Transport Module (OTM) User Manual for operational details.

Broadband Connectivity System II

Copper :: Part Number 117389-4

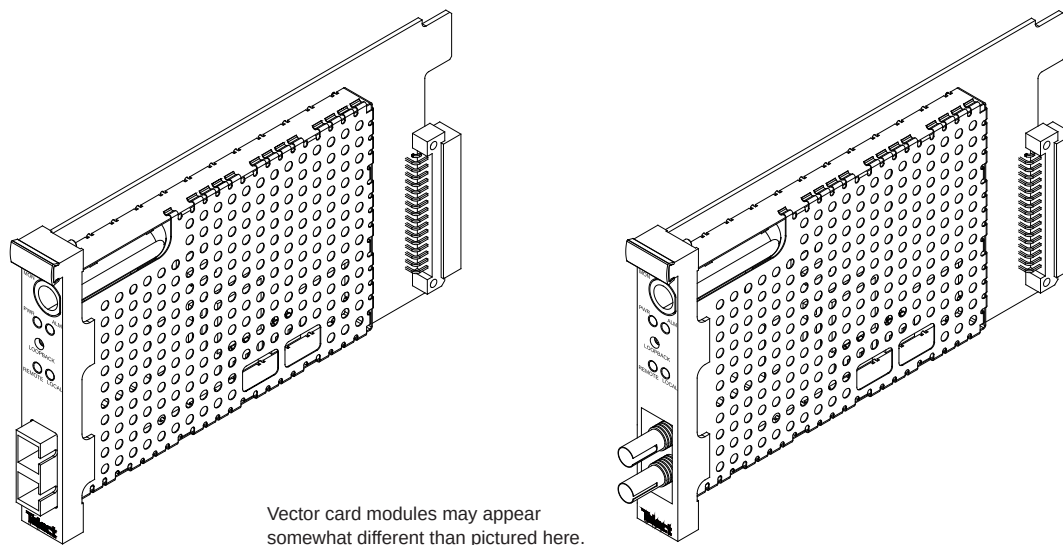


Figure 18 - Vector OTM with SC Connectors

Vector OTM with ST Connectors

1.5 Power Distribution

You can use a wide variety of -48Vdc power distribution panels to provide power to a DSX chassis. If your installation includes repeaters or other active products, use a dual-feed power distribution panel (PDP) to ensure power availability in case one power feed fails. One appropriate PDP for this application is Telect Model 06004-11, shown in the following illustration. Model 06004-11 is a dual-feed GMT PDP with 20 fuse positions per side and a total output load capability of 20A.

Use the following power specifications to select the proper PDP for your application:

- DSX cards draw 18 mA total, 9 mA for each tracer lamp.
- Repeater cards draw up to 60 mA each.
- Optical/electrical converter cards draw up to 180 mA each.

Fuses for each chassis must be 1-1/3 amp. Use 22 AWG wire (minimum) for power distribution to each chassis. Use red wire to connect to RTN and black for BATT. Remember that all PDPs and BCSII chassis require grounding, including DNI chassis.

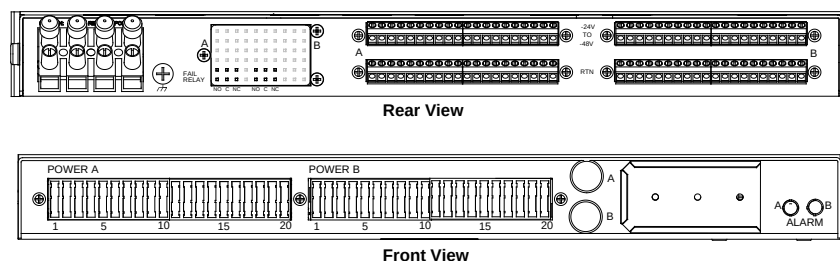


Figure 19 - Dual-Feed 20A GMT Power Distribution Panel With Fuse Alarms

Broadband Connectivity System II

Copper :: Part Number 117389-4

1.6 Specifications

1.6.1 DSX Electrical

Insertion Loss: 0.6 + 0.55 dB at DS3/E3 signal rates for assemblies that do not include a monitor network. < 1.00 dB at DS3/E3 signal rates for assemblies that include a single monitor point.

Monitor Level: 21 dB + 1.5 dB below signal level

Return Loss: < -26 dB at DS3/E3, STS-1 signal rates
< -26 dB at E3 signal rate of 17.184 Mhz
< -15 dB at STS-3/STM-1 signal rates

Contact Resistance: < 0.01Ω

Characteristic Impedance: 75Ω

Tracer Lamp LED: Draws 9mA at -48Vdc

1.6.2 Mechanical

Jack Insertion force: 10 lbs maximum, 4.1 lbs. minimum

Jack Withdrawal force: 7 lbs. maximum, 3.8 lbs. minimum

Jack Life: Minimum 10,000 insertion/withdrawal cycles

1.6.3 Environmental

Thermal Limits (Passive): -55°C to +85°C, operating and non-operating

Thermal Limits (Active): -55°C to +85°C, non-operating; 0°C to +50°C, operating

Thermal Shock: per MIL-STD-202, method 107D

Humidity: 0% to 95%, operating and non-operating

Broadband Connectivity System II

Copper :: Part Number 117389-4

Chapter 2: Installation

2.1 Installation Considerations



CAUTION

CAUTION! Only qualified technicians may install and maintain this product. These instructions presume you have verified that the Telect equipment being installed is compatible with the rest of the system, including power, ground, circuit protection, signal characteristics, equipment from other vendors, and local codes or ordinances.



ALERT

Use this equipment in a **RESTRICTED ACCESS LOCATION ONLY**.

2.1.1 Location and Space

The BCSII chassis mount in standard 19 in. or 23 in. WEKO-spaced or EIA-spaced racks. Allow for four inches of vertical space per chassis.

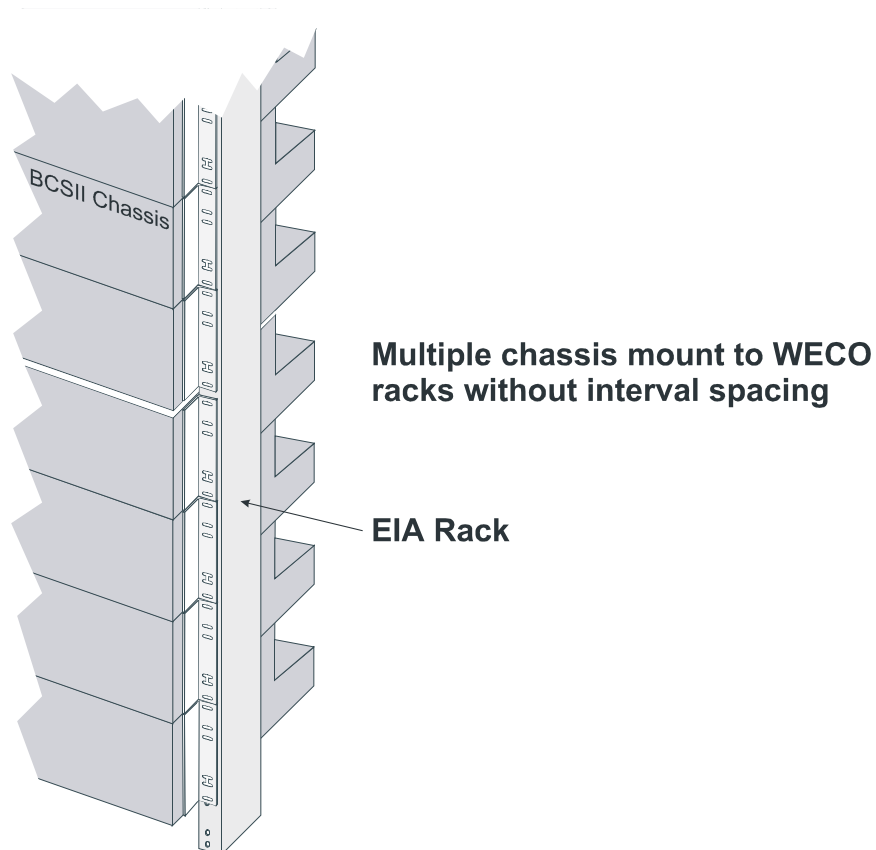


Figure 20 - Rack

Broadband Connectivity System II

Copper :: Part Number 117389-4

2.1.2 Computer Floor Issues

The weight of a fully populated BCSII bay may exceed 500 lbs. Each configuration will vary in weight depending on number and type of cards and cables used. Adding repeaters will increase weight. If bay weight exceeds the support capacity of your floor, computer floor supports may be required.

2.1.3 Required Tools and Equipment

- BNC crimpers for constructing BNC connector ends. Die sets required, depending on cable.
- BNC insertion tool, Telect PN 097197.

2.2 Inspection

Compare the contents of the shipping container with the packing list. Call Telect or your distributor if you are missing anything.

Telect is not liable for shipping damage.

If the shipping container is damaged, keep it for the carrier's inspection. Notify the carrier and call Telect's Customer Service Department: 1-800-551-4567 or 1-509-926-6000

Keep the container until you have checked equipment operation. If you experience any kind of problem, call Telect's Customer Service Department. Use the original, undamaged container if you are instructed to return the BCSII component to Telect.

2.3 Installation

1. Mount the BCSII chassis, along with designation cards, to a rack, using the four supplied mounting screws (two per side). Torque to 35 in.-lbs (4.29 N•m.).

Broadband Connectivity System II

Copper :: Part Number 117389-4

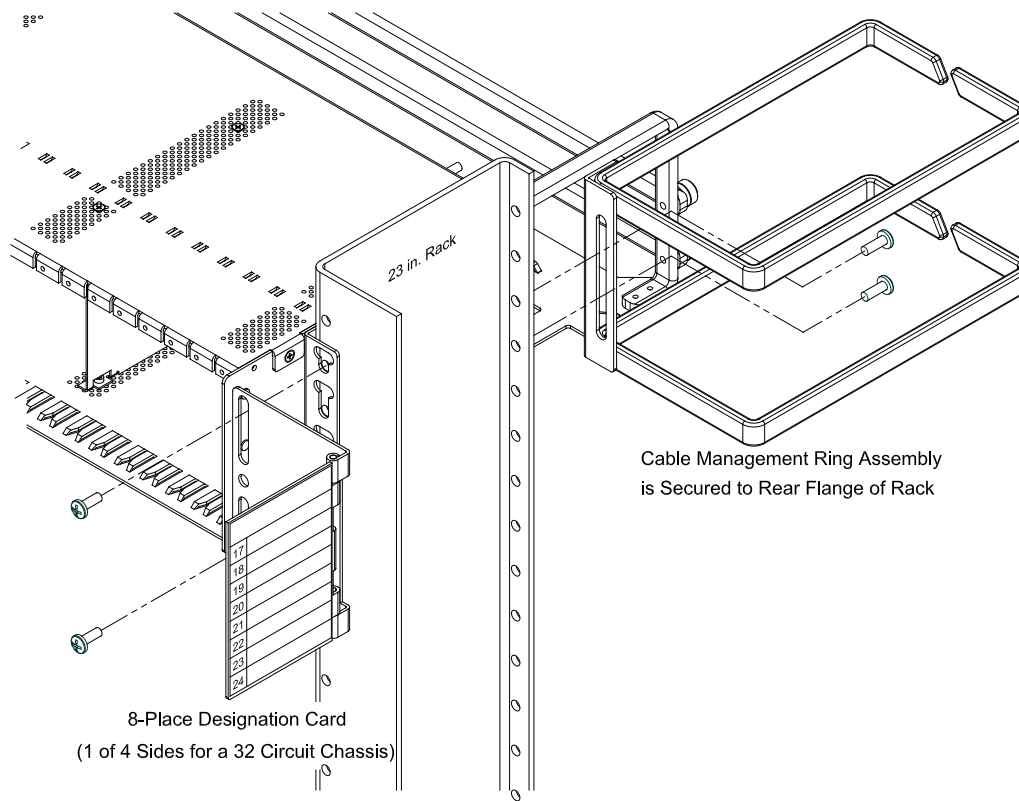



Figure 21 - Mounting Chassis to Rack

2. Install cable management rings on the rear rack flange using the hardware provided.
3. Repeat Steps 1 and 2 to install all BCSII chassis before installing power and I/O cables to any BCSII chassis in the rack.
4. For BCSII chassis that require power, route power from the power distribution panel to connectors on the rear of BCSII chassis. Use wire in the 10-22 AWG range. Strip away about $\frac{3}{8}$ in. (~10 mm) of insulation and then press in on the tab at the top of the connector to open the connector's jaws. Insert the wire below the tab and then release the tab to cinch the wire.

NOTE: If installing active card modules, check the installation instructions included with those modules before installing them in the chassis. Some active modules, such as repeaters, require jumper setting selections.

Broadband Connectivity System II

Copper :: Part Number 117389-4

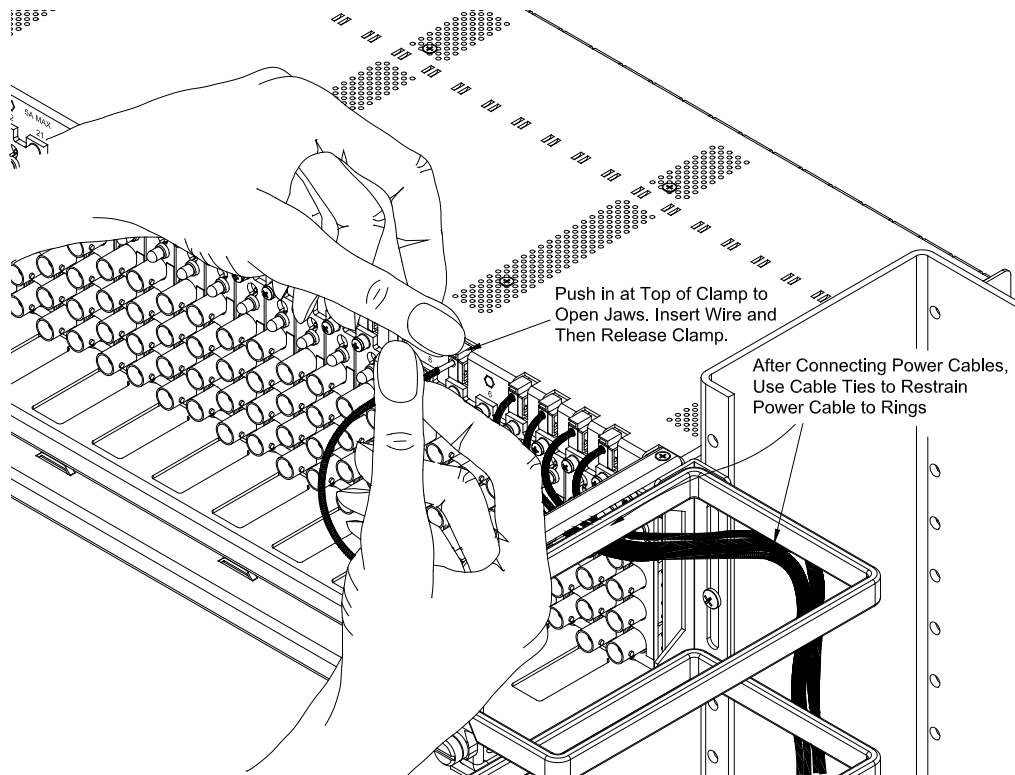

5. Slide the card modules along the guides in the chassis and press into backplane connectors in the rear of the chassis. Secure the cards with the captive screw.

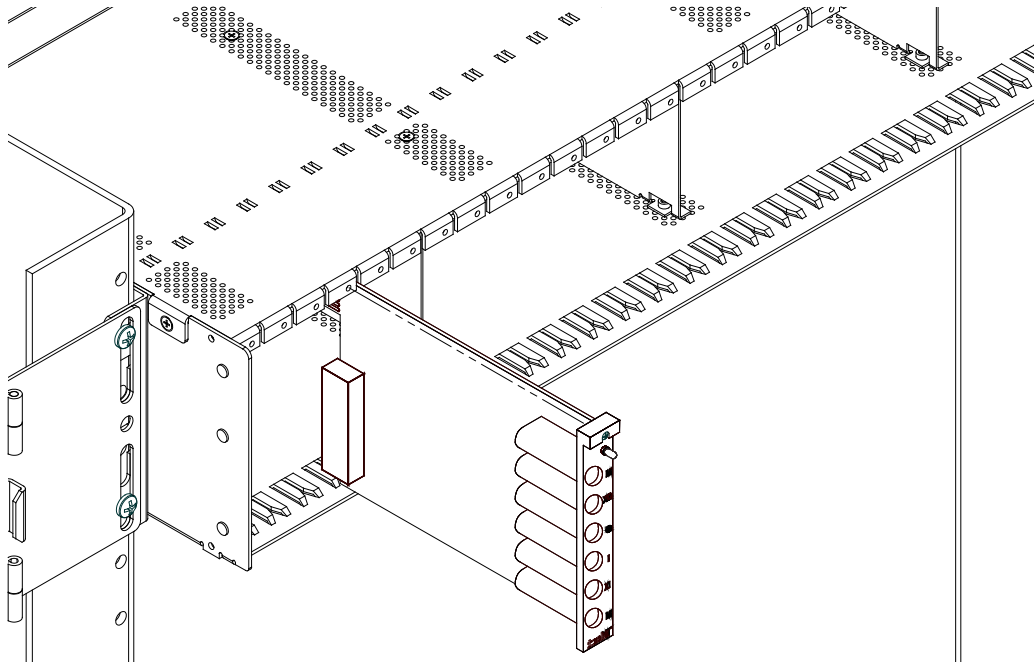


Figure 22 - Installing a Module

Broadband Connectivity System II

Copper :: Part Number 117389-4

6. Ground the chassis lug to the rack using #6- to #14-AWG stranded wire and a single-hole compression ring lug for a #8 stud.

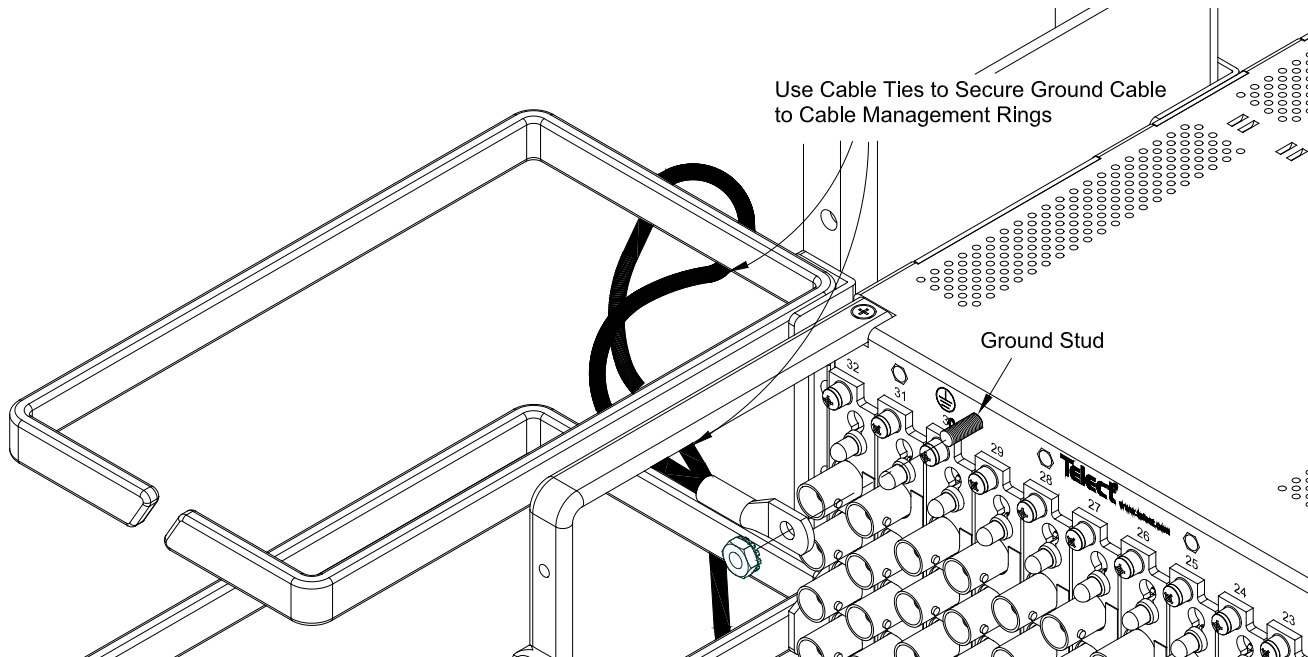


Figure 23 - Grounding the Chassis

7. Connect I/O cables to the rear of the chassis, as shown in figure 25. In general,
 - For network I/O cables originating overhead, start with the lowest BCSII chassis in the rack and work up.
 - For network I/O cables originating from below, start with the highest chassis in the rack and work down.
 - NE I/O cables connect to the lower I/O connectors on the chassis. Use a BNC insertion tool.

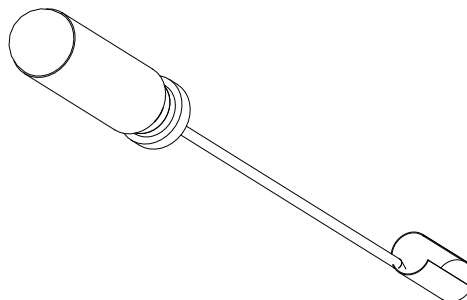


Figure 24 - BNC Insertion Tool

Broadband Connectivity System II

Copper :: Part Number 117389-4

8. Use cable ties liberally along the lower tie-down bar and tie-down lances (loops) at the rear of the chassis.
9. Insert cross-connecting cables to upper two connectors, labeled IX and OX on DSX cards.
10. If applicable, connect tracer wire to the port above the tracer LED, as shown in figure 26.
11. Use cable ties along the upper tie-down bar to restrain the X-connect cables.

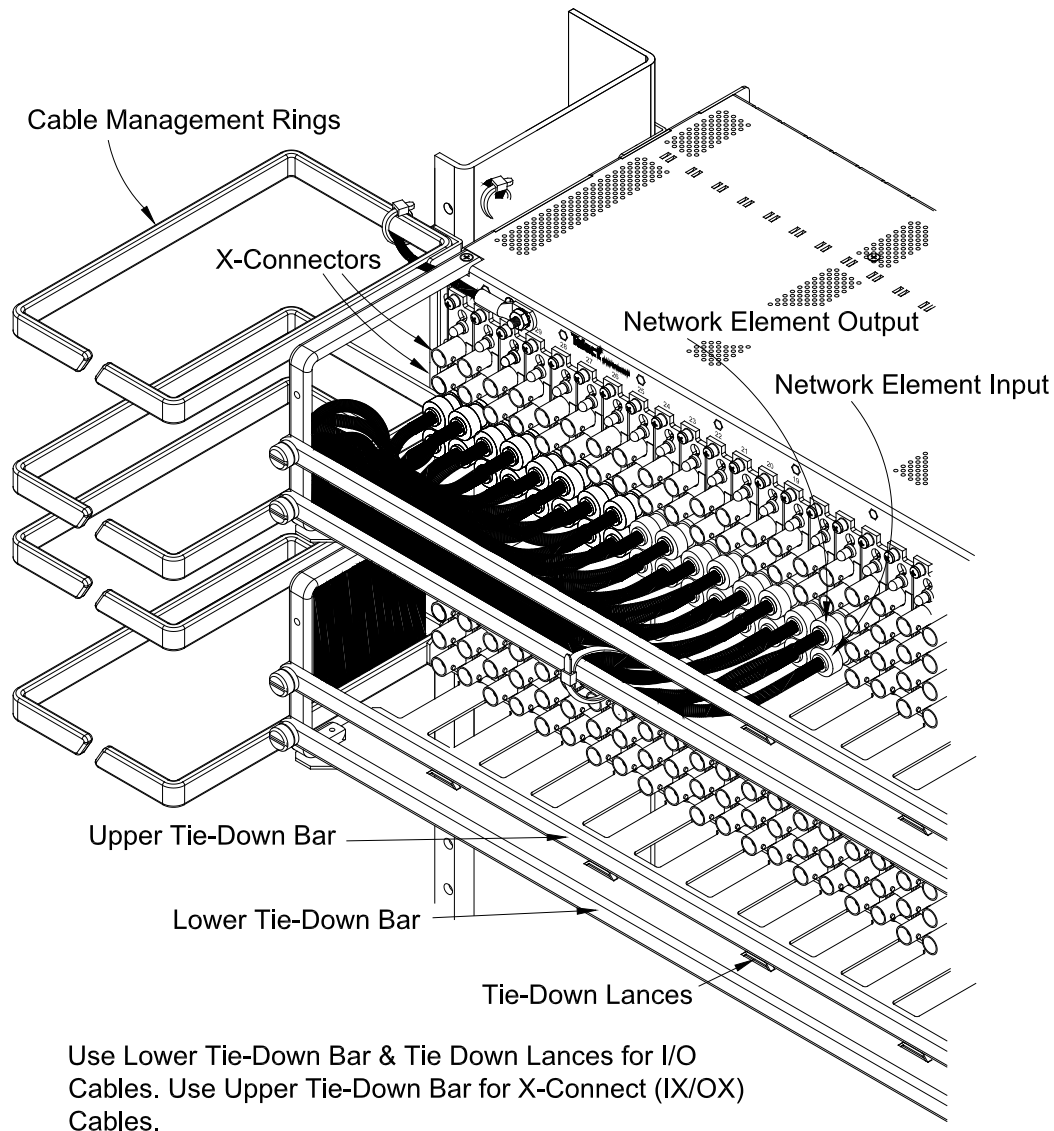


Figure 25 - Connections

Broadband Connectivity System II

Copper :: Part Number 117389-4

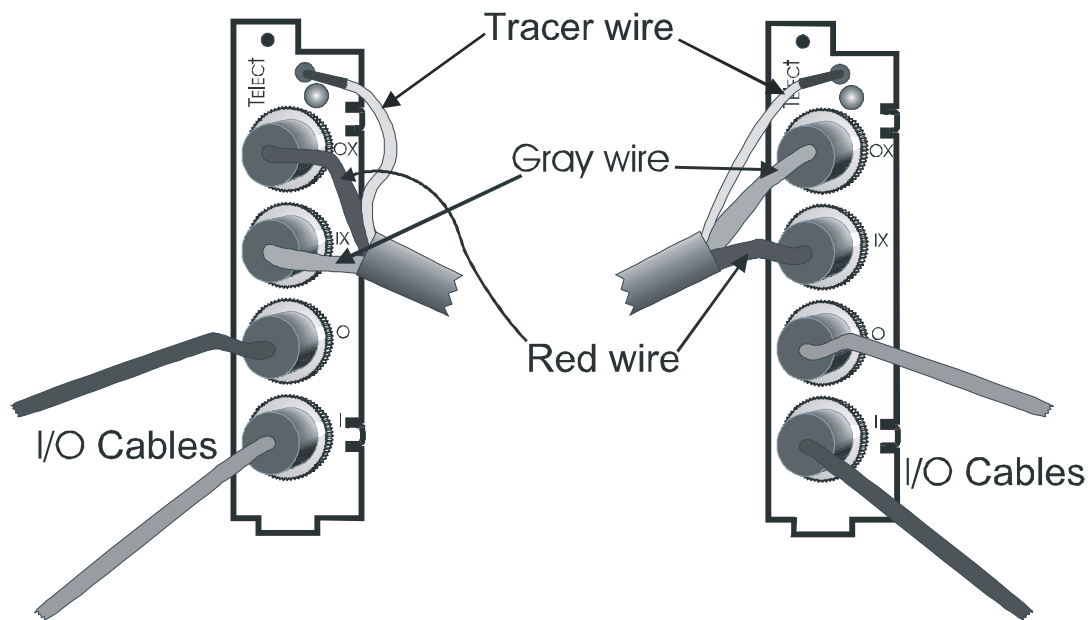


Figure 26 - Rear Cross-Connect Cables with Tracer Wire

Broadband Connectivity System II

Copper :: Part Number 117389-4

This page intentionally left blank.

Broadband Connectivity System II

Copper :: Part Number 117389-4

Chapter 3: Electrical Operation

3.1 Power

The BCSII equipment is passive with the exception of the repeater and Vector OTM card modules. The DSX chassis accept -48V office battery power to light the tracer lamps (TL) LED on the front of DSX and repeater cards and LEDs on the rear of the chassis.

Power connects to the Power/Alarm Terminal Strip on the back of each DSX chassis. The strip terminates a bus on the chassis backplane; all DSX card connectors on the backplane tap into the signal lines of this bus. Power for the rear TLs passes from the bus on the backplane, through the DSX card, to a small PCB also on the backplane.

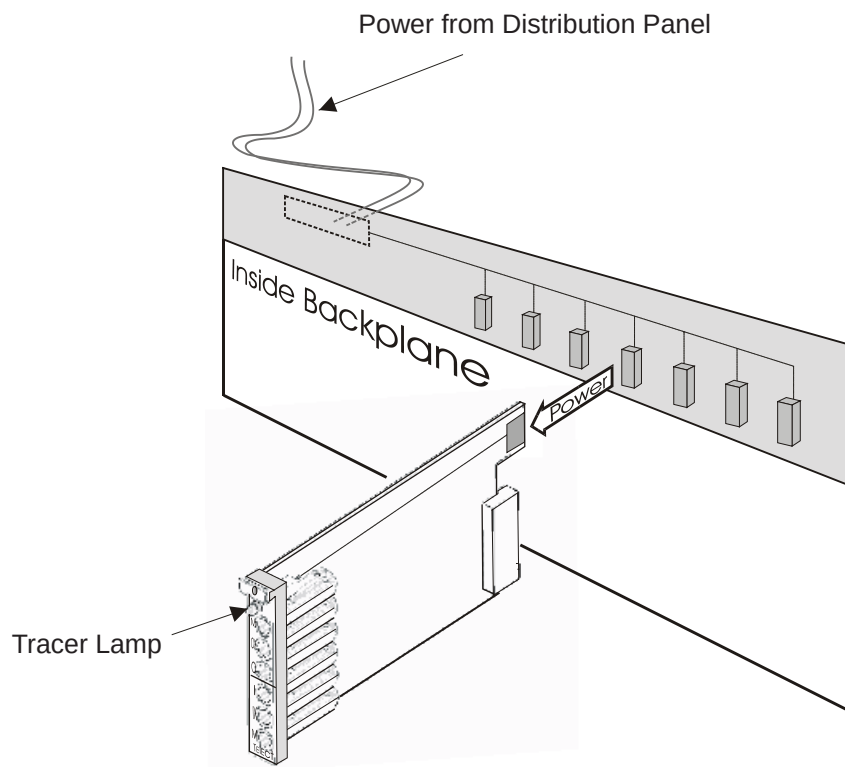


Figure 27 - Power from Distribution Panel to Front Tracer Lamp

Broadband Connectivity System II

Copper :: Part Number 117389-4

3.1.1 Tracer Lamps (TL)

The TL lights up when a plug is inserted into one of the monitor jacks on the front of a DSX card. Also, with the monitor plug in place, TLs of cross-connected cards will flash for 30 seconds, then light steadily.

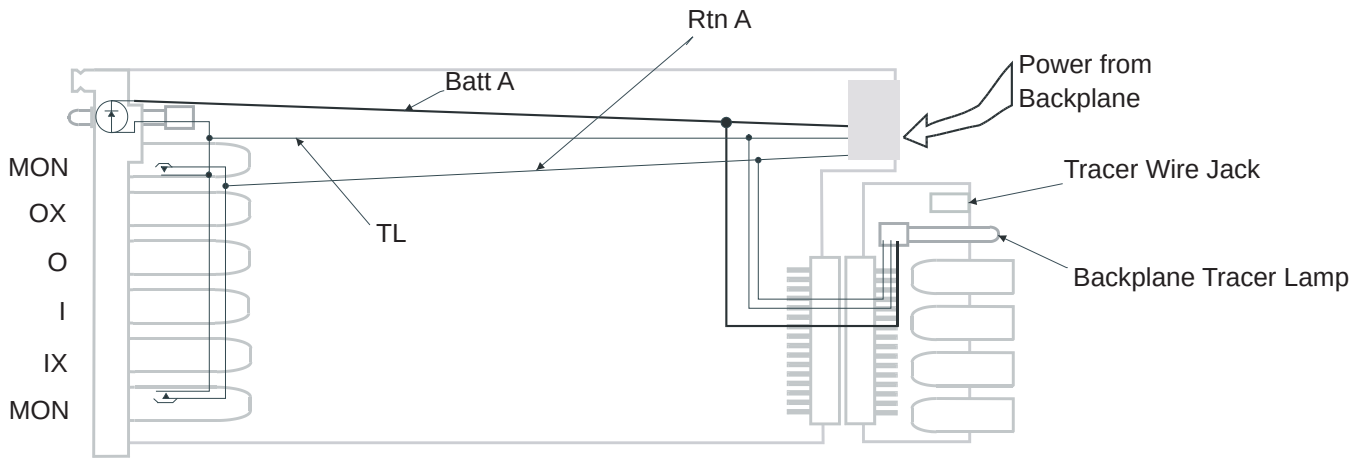


Figure 28 - Tracer Lamp Operation

3.1.2 Monitor Ports

All DSX cards have at least one monitor port on the front side, labeled “M” or “MON”. Test equipment may be applied without interrupting service. The three-port card has a monitor for the OUT signal only.

3.2 DSX Cross-Connections

Do not make rear cross-connections using cables longer than 27 ft, unless using a repeater card.
Do not make front patch connections longer than 20 feet.

3.2.1 Backplane Cross-Connections

To cross-connect two network elements, use approved coax cable and connect the OX (X-OUT) port from the card for network element 1 (NE-1) to the IX (X-IN) for network element 2 (NE-2), AND connect the OX port for NE-2 to the IX port from NE-1. See the diagrams below

Broadband Connectivity System II

Copper :: Part Number 117389-4

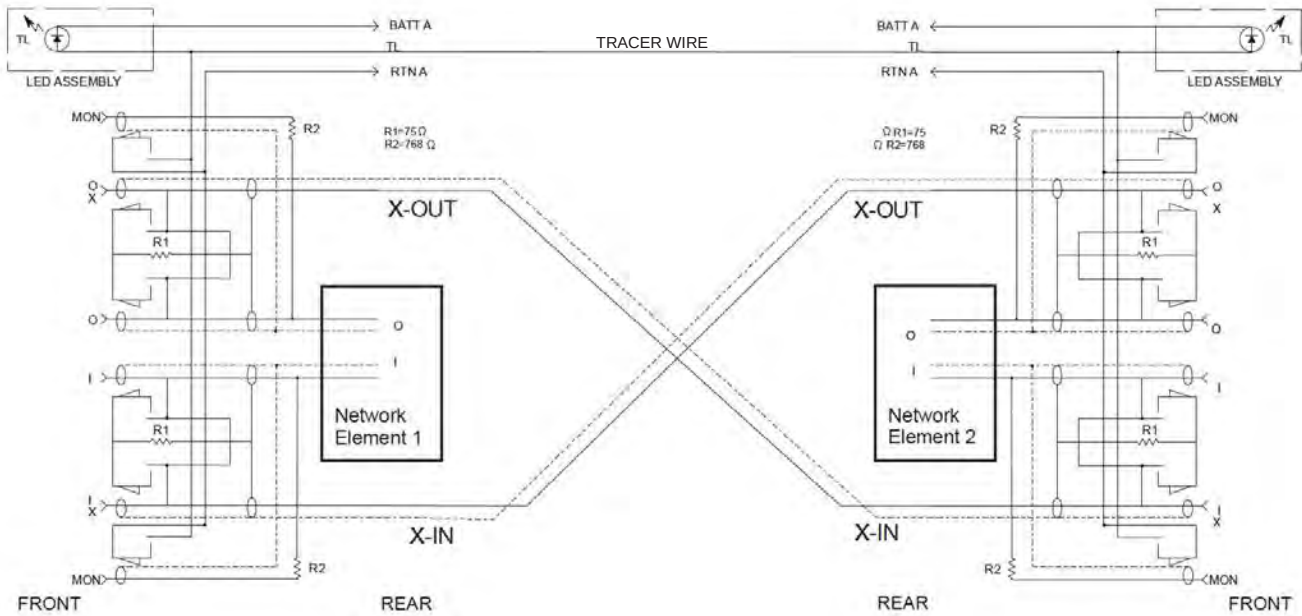


Figure 29 - Schematic Drawing of Cross-Connection

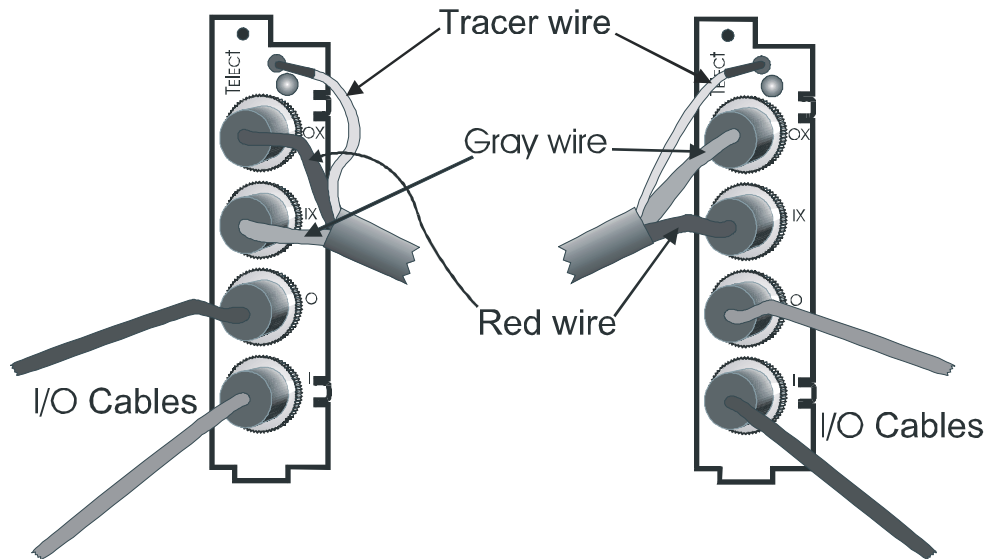


Figure 30 - Rear Cross-Connect Cables with Tracer Wire

Broadband Connectivity System II

Copper :: Part Number 117389-4

3.2.2 DSX Card Front Patch

Install front patches to temporarily re-route signals. Patches with jacks labeled O, OX, I, IX are intrusive and interrupt service. Use 734A or 735A cable. Patch only to cards less than 20 feet away. Remove temporary patches in accordance with office procedures after permanent backplane cross-connections have been made.

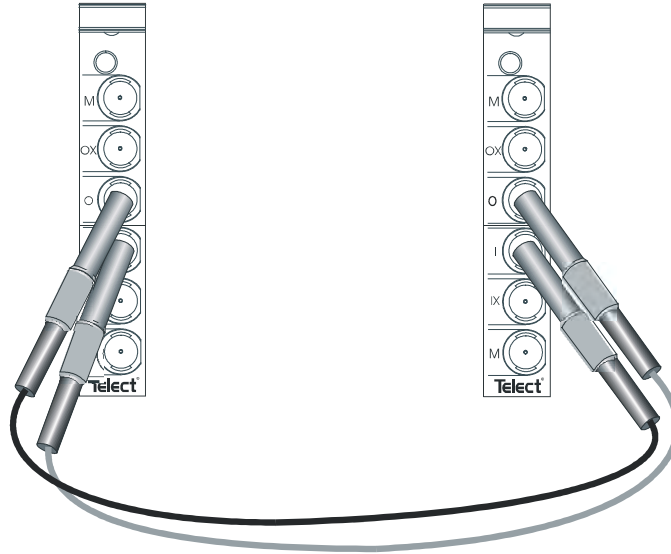


Figure 31 - Temporary Front Cross-Connect Using Patch Cables & DSX Cards

3.3 Repeater Cards

3.3.1 Simplex Repeater Card

A simplex signal repeater card (Model 710-3201-0002) contains a single repeater along with DSX cross-connection capability.

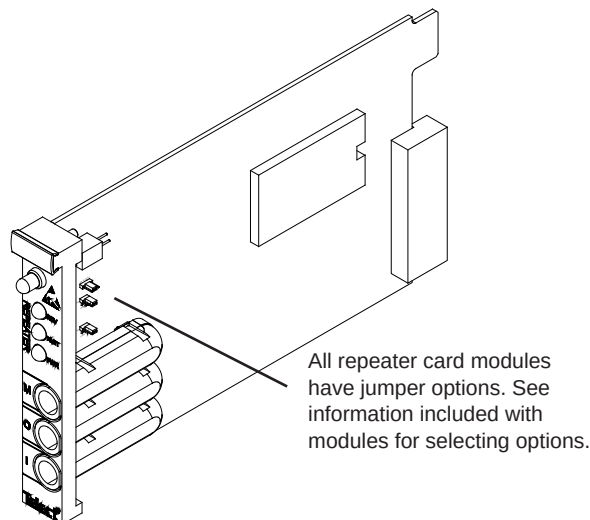


Figure 32 - Simplex Repeater

Broadband Connectivity System II

Copper :: Part Number 117389-4

The simplex repeater, ALWAYS USED IN PAIRS, can drive DS3 output via ATT 734A cable to a network element receiver port (or another repeater) up to 900 ft (274 m) away. Contact your distributor or call Telect at 800-551-4567 for more information.

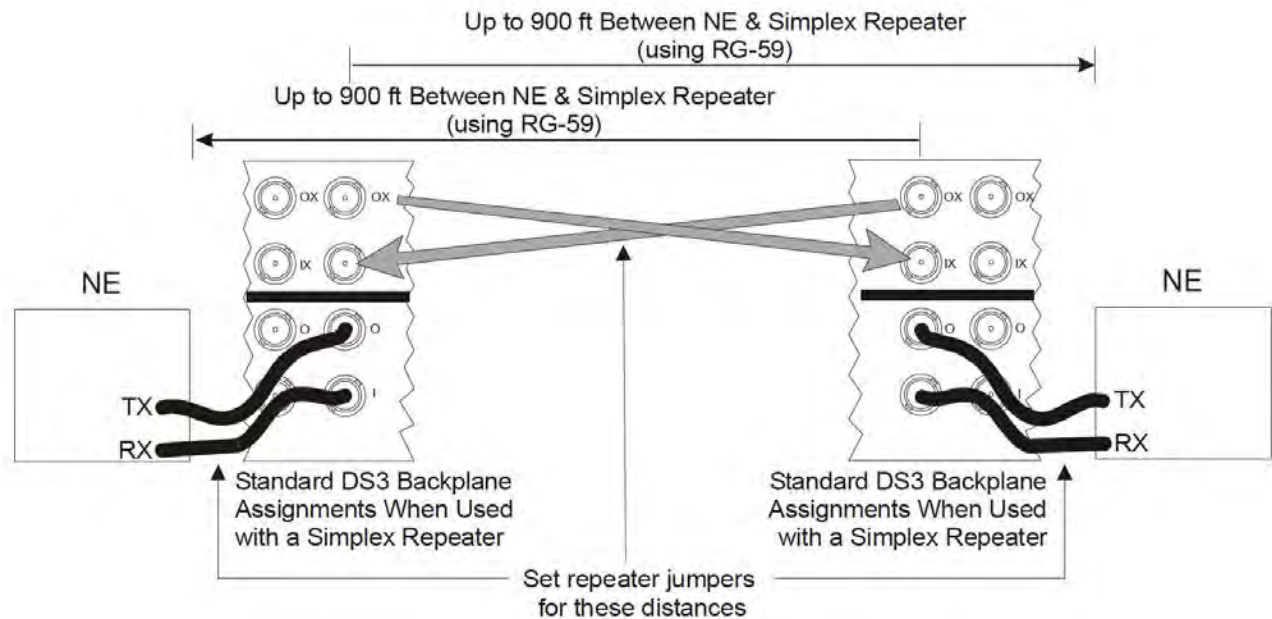


Figure 33 - Repeater Application Using Two Simplex Repeaters

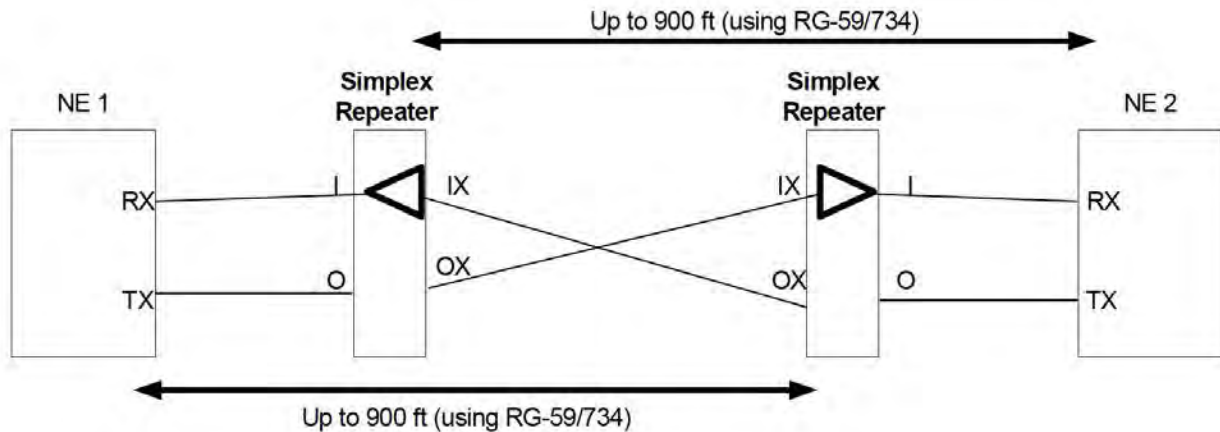


Figure 34 - Simplified Schematic of a Simplex Repeater Application

Broadband Connectivity System II

Copper :: Part Number 117389-4

3.3.2 Duplex Repeater Card

A duplex repeater card (Model 710-3201-0005) contains two independent repeaters. Normally, the duplex repeater is placed midway between DS3 cross-connection modules.

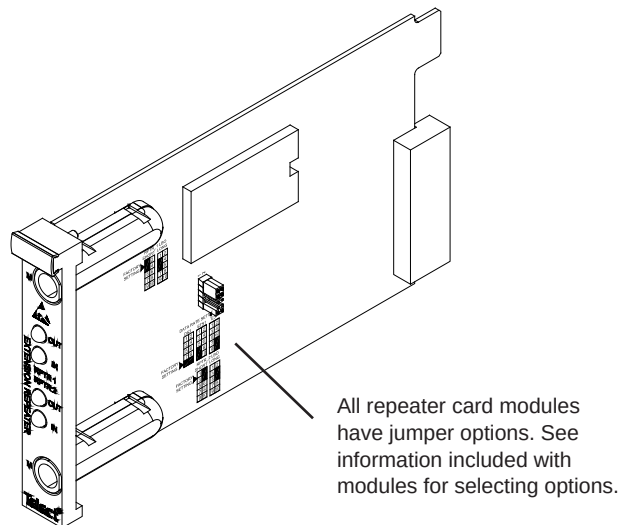


Figure 35 - Duplex Repeater

Like a pair of simplex repeaters, a single duplex repeater can drive DS3 output via ATT 734A cable to a network element receiver port (or another repeater) up to 900 ft (274 m) away. Contact your distributor or call Telect at 800-551-4567 for more information.

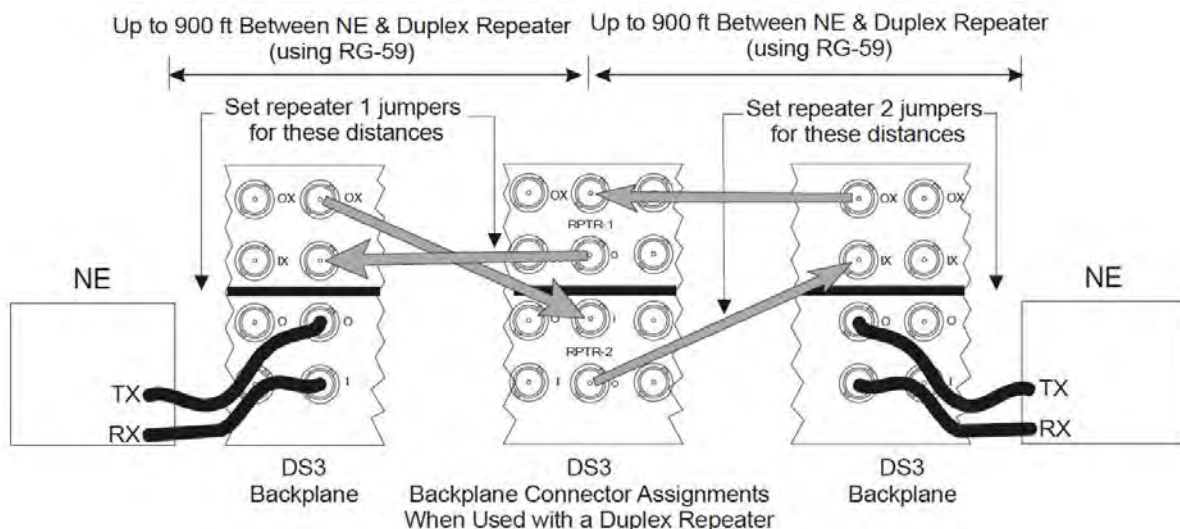


Figure 36 - Repeater Application Using a Duplex Repeater

Broadband Connectivity System II

Copper :: Part Number 117389-4

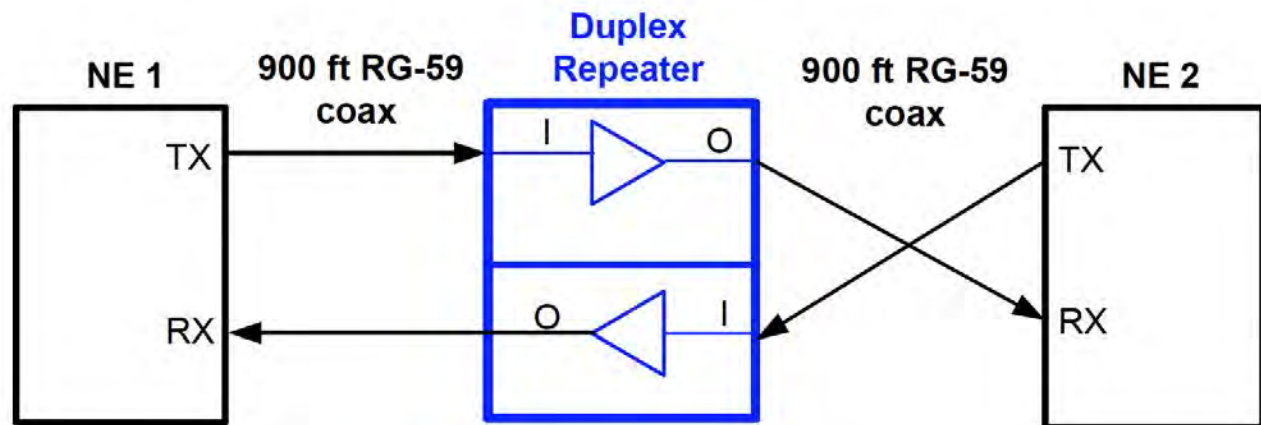


Figure 37 - Simplified Schematic of a Duplex Repeater Application

3.4 DNI Operations

3.4.1 Basic Function: Digital Network Interconnection

Telect's DNI-3 card provides an interconnection between two network elements (NE-1 and NE-2) and allows temporary access for testing and monitoring.

The DNI chassis uses only one DNI-3 card per circuit. The DNI card does not have crossconnect capability for circuit reconfiguration.

The DNI-3 and interconnect card system suits limited-space locations where reconfiguration is not usually required: CEVs, HUTs, Op cabinets, and customer premises.

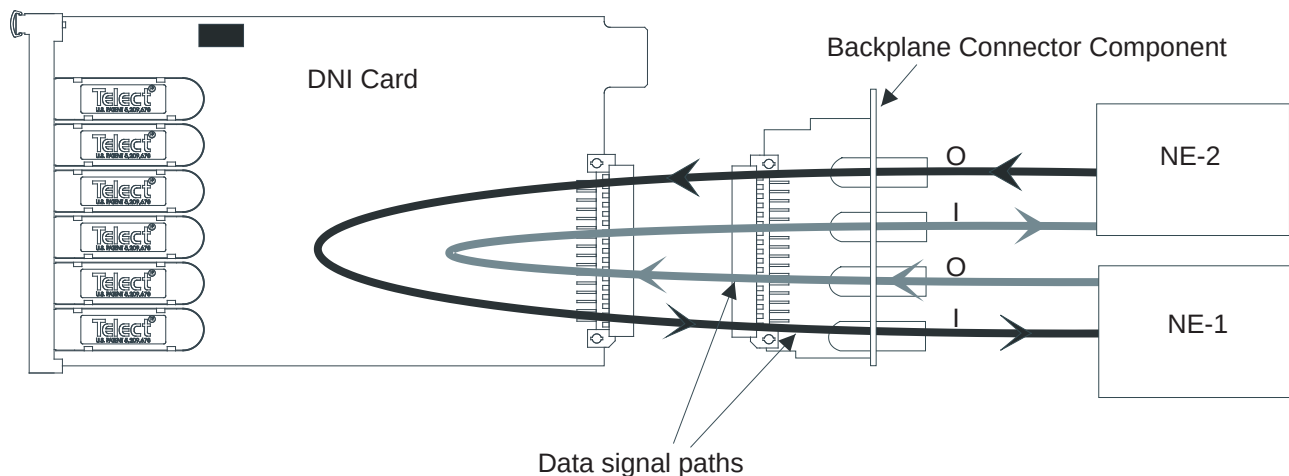


Figure 38 - DNI

Broadband Connectivity System II

Copper :: Part Number 117389-4

3.4.2 Interconnect Network Elements Using DNI Cards

Connect the I/O of NE-1 and NE-2 to the connectors on the DNI backplane as shown.

The interconnection between NE-1 and NE-2 is made automatically within the DNI card. DNI backplane designators above are present on dedicated DNI chassis only (Model 010-0000-1402BCS).



WARNING

WARNING! When using the DNI-3 card in the standard BSCII DSX chassis (Models 010-0000-2401BCS, -3201BCS, 1401BCS), the backplane will have designators for cross-connection, not for DNI interconnect function. I/O for NE-2 will be connected on the two upper positions, which will be labeled “OX” and “IX”. Make a special note in your records and/or label the cables per operating company guidelines.

3.4.3 DNI Card Monitoring

Output signals may be monitored with a $-21 \pm 1.5\text{dB}$ loss using the monitor jacks (“M”) as shown. The top monitor jack monitors the NE-2 output signal, bottom monitor jack monitors the NE-1 output signal

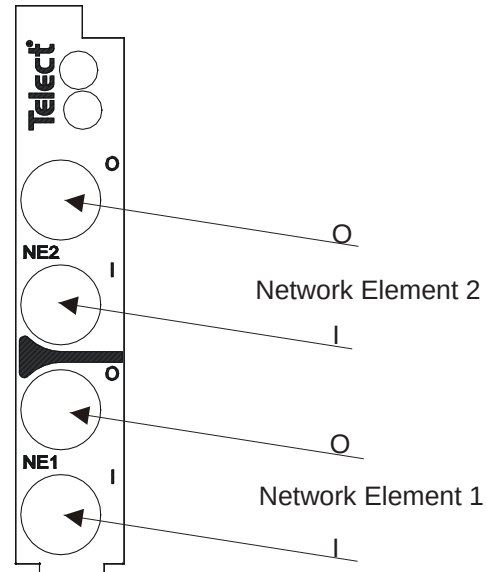


Figure 39 - Network Elements

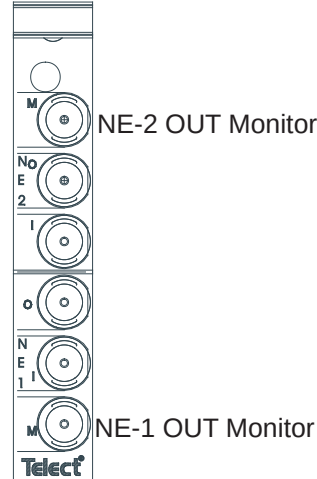


Figure 40 - DNI Card Monitoring

Broadband Connectivity System II

Copper :: Part Number 117389-4

3.4.4 DNI Patching

Temporary patches may be established using the I/O jacks on the front faceplate as shown. This operation is intrusive and will interrupt the permanent interconnection, routing the signals through the patch cords.

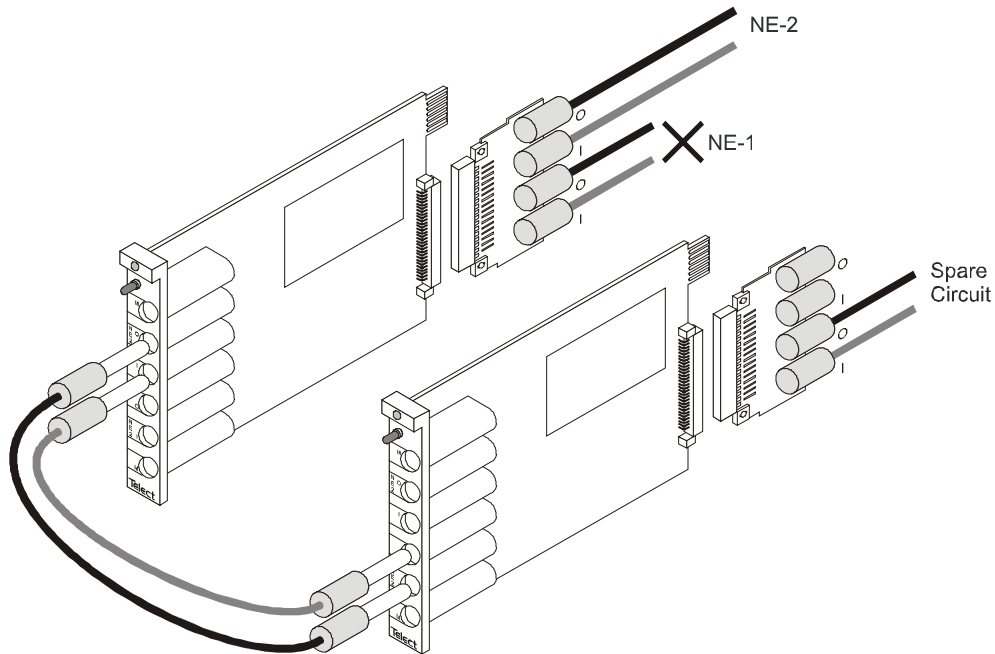


Figure 41 - Patching Between DNI Card Modules

Broadband Connectivity System II

Copper :: Part Number 117389-4

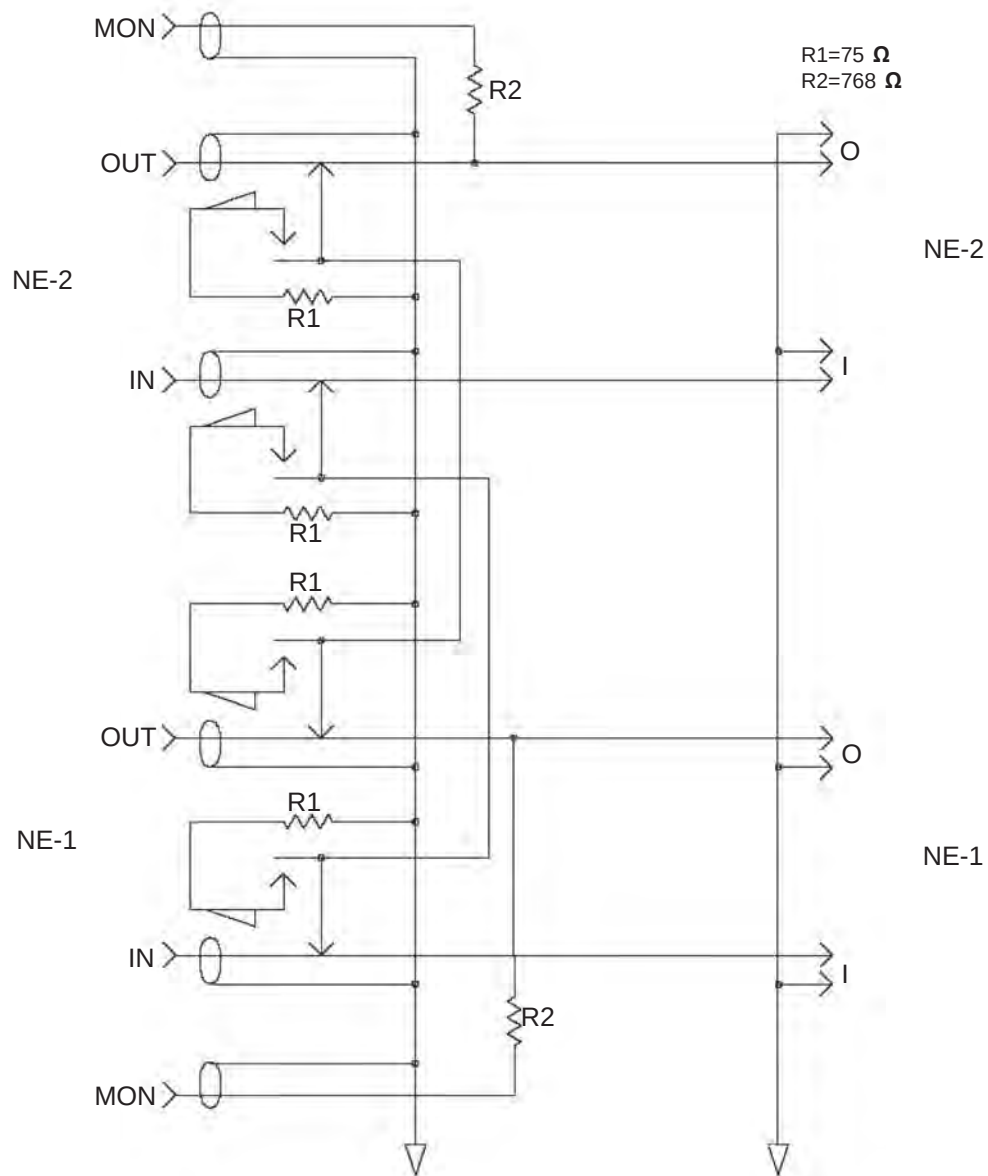


Figure 42 - Reference Schematic for DNI-3 Card Module (Model 010-3201-0402)

3.5 Skeleton Bay Options

Telect offers several options for configuring bays in your lineup. Please consult your distributor or visit our website at Telect.com.

Broadband Connectivity System II

Copper :: Part Number 117389-4

This page intentionally left blank.

Broadband Connectivity System II

Copper :: Part Number 117389-4

Chapter 4: Service

4.1 Owner Maintenance

Telect's BCSII components do not need preventive maintenance. The only service you can perform is to replace these assemblies if they fail:

- DSX Card Module
- Repeater Card Module
- DNI Card Module
- Chassis
- Tracer lamp LEDs, on card and on backplane

4.2 Troubleshooting Cross-Connected Signals

Check for correct and firm cable connections at the termination and cross-connect points on every card.

4.3 Replacing the Tracer Lamp LED

Pull the LED assembly and plastic holder straight out.

If LED polarization is not correct, the replacement will not work. Orient the new LED in the plastic holder the same as the original. The shape of the LED holder slot in the DSX module is keyed for proper LED insertion.

4.4 Service

4.4.1 In-Warranty Service

Contact your Telect equipment distributor, or call a Telect Customer Service Representative:
1-800-551-4567
1-509-926-6000

Telect will repair or replace defective products within the limits of the warranty. See "Repacking for Shipment" in this section.

Call a Customer Service Representative for a Return Material Authorization (RMA) before returning any equipment.

Broadband Connectivity System II

Copper :: Part Number 117389-4

4.4.2 Out-Of-Warranty Service

The procedure for out-of-warranty service is the same as for in-warranty service, except that Telect charges a processing fee, and you must submit a Purchase Order along with a Return Material Authorization (RMA) before returning equipment. Call a Customer Service Representative for help getting these forms.

The processing fee guarantees a repair estimate and is credited against actual material and labor costs.

4.5 Repacking For Shipment

Telect is not liable for shipping damage.

1. Tag the equipment showing owner's name, address, and telephone number, together with a detailed description of the problem.
2. Use the original shipping container if possible. If you do not have it, package the equipment in a way to prevent shipping damage. Include the RMA inside the container.
3. Insure the package.